

# KAYO MOTO

T4

## SERVICE MANUAL



**WWW.KAYOMOTO.COM**

This service manual is edited by KAYO

Please do not modify the content without authorization.

Manufacturer has the right to improve and update the model's structure and spare parts without notice.

The model in the image may be different from the real model.

## **Preface**

We sincerely thank you for choosing the KAYO brand T-series dirt bike produced by ZHEJIANG KAYO MOTOR CO., LTD.

Now you've owned a dirt bike with advanced technology, and we believe that it'll bring you fun and enjoyment as long as you could carry out maintenance according to this manual. Please do read this manual carefully before you riding it firstly, so that you could be familiar with its performance and operating method. Maybe this would cost you valuable time, while only in this way, you could know how to adjust this bike according to your own needs, how to protect yourself from hurt. What's more, this manual contains lots of motorcycle maintenance knowledge, which is very important. If you will sell this bike to others, please offer this manual to the purchaser.

In this manual, it contains words like "Danger/Warning/Caution", please read the manual carefully and follow the instructions closely when performing inspections and repairs. If you need to repair your bike during the racing, it must be dealt with by professional repairman. KAYO strongly recommend that users should go to our designated dealers for maintenance. Please be sure to run in, check and maintain the motorcycle in accordance with this service manual, which will increase your motorcycle's lifespan.

Riding motorcycle is kind of pleasant sport, hoping you could enjoy yourself by using our products. In order for you to enjoy this sport, we hope you can take care of your motorcycle and regularly inspect and maintain it. At the same time, for your personal safety, please abide by relevant laws and regulations.

Thanks again for your support and cooperation, and we sincerely wish you a pleasant riding!

## **Notification and Warning**

For the sake of technical development, KAYO will reserve the right of modifying motorcycle structure, equipment, and spare parts without notice. Due to that different markets have different laws requirement, we've adjusted model accordingly, the model image in this manual maybe different from real vehicle. In addition, please check our website [www.kayomoto.com](http://www.kayomoto.com) and contact with our customer service if you have any questions.

In this manual, it'll contain words like "Danger/Warning/Caution", please read the manual carefully and follow the instructions closely when performing inspections and repairs, this will increase the reliability, performance and overall lifespan of the vehicle. The meanings of "DANGER", "WARNING" and "CAUTION" are as follows:

Danger: you should pay attention on the dangers that may cause severe injuries or death.

Warning: you should notice of the dangers that may cause injuries or vehicle damage.

Caution: you should focus on the dangers that may cause you uncomfortable or vehicle lifespan decrease.

However, please notice that we only list the may safety issues about the vehicle maintenance in this manual, so the content of these warnings can not contain all of the potential dangers during vehicle using and maintenance. Therefore, besides the relevant issues contained in "DANGER", "WARNING" and "CAUTION", users should have some kind of basic mechanic safety knowledge. If you are not able to complete the entire maintenance and repair operation process, please consult with a more experienced senior technician before performing the operation or go to KAYO dealer for repair and maintenance.

## **WARRANTY INFO**

KAYO dirt bike is designed and manufactured with the requirement to be resistant to normal wear and tear or used routinely in competitions.

The maintenance of the engine and the whole vehicle is crucial to the good use of the motorcycle and the avoidance of wear and tear, otherwise, it may cause the damage of vehicle or spare parts if you adjust it improperly.

You should deal with the maintenance according to the "Lubrication and maintenance tables", and record the specific maintenance process as a quality assurance document. For vehicle problems

caused by improper maintenance, no warranty is provided.

The fuel, lubricants or related liquids described in the service manual must be in accordance with the specifications in the maintenance list.

The damage or loss caused by improper operation or unauthorized modification of the motorcycle will not be covered by the warranty. Using in extreme conditions, such as extremely muddy, slippery surfaces, can lead to excessive wear of the transmission system or brakes, under such circumstances, the motorcycle should be maintained or replaced in advance.

The specific warranty period depends on the dealers in each region. Please contact the local dealers of KAYO for the specific warranty matters.


## **Content**

|                                      |           |
|--------------------------------------|-----------|
| <b>Preface.....</b>                  | <b>3</b>  |
| <b>Notification and warning.....</b> | <b>4</b>  |
| <b>Warranty info.....</b>            | <b>4</b>  |
| <b>Vehicle profile.....</b>          | <b>7</b>  |
| Vehicle component and location.....  | 8         |
| VIN number.....                      | 10        |
| Specifications.....                  | 11        |
| Circuit diagram.....                 | 15        |
| Fastners torque table.....           | 16        |
| <b>Operation instruction.....</b>    | <b>18</b> |
| Check before riding.....             | 19        |
| Starting steps.....                  | 21        |
| Vehicle run in.....                  | 23        |
| Vehicle cleaning.....                | 23        |


|                                                    |           |
|----------------------------------------------------|-----------|
| Storage and use of vehicles.....                   | 24        |
| <b>Routine maintenance.....</b>                    | <b>25</b> |
| Maintenance Periodic Table.....                    | 26        |
| Specific maintenance content.....                  | 27        |
| <b>Vehicle settings.....</b>                       | <b>34</b> |
| Specific settings and methods.....                 | 35        |
| <b>Electric parts inspection.....</b>              | <b>37</b> |
| Electric parts inspection and replacement.....     | 38        |
| <b>Vehicle troubleshooting.....</b>                | <b>47</b> |
| Possible failures and troubleshooting methods..... | 48        |
| <b>Engine maintenance manual.....</b>              | <b>52</b> |
| Main performance parameters.....                   | 53        |
| Structure.....                                     | 53        |
| Engine Installation.....                           | 54        |
| Engine maintenance and adjustment.....             | 54        |
| Disassembly of the engine.....                     | 57        |
| Torque gauge for engine bolts and nuts.....        | 58        |
| Engine failures and troubleshooting.....           | 59        |

## Vehicle profile


|                                     |    |
|-------------------------------------|----|
| Vehicle component and location..... | 8  |
| VIN number.....                     | 10 |
| Specification.....                  | 11 |
| Circuit diagram.....                | 15 |
| Fasteners torque table.....         | 16 |

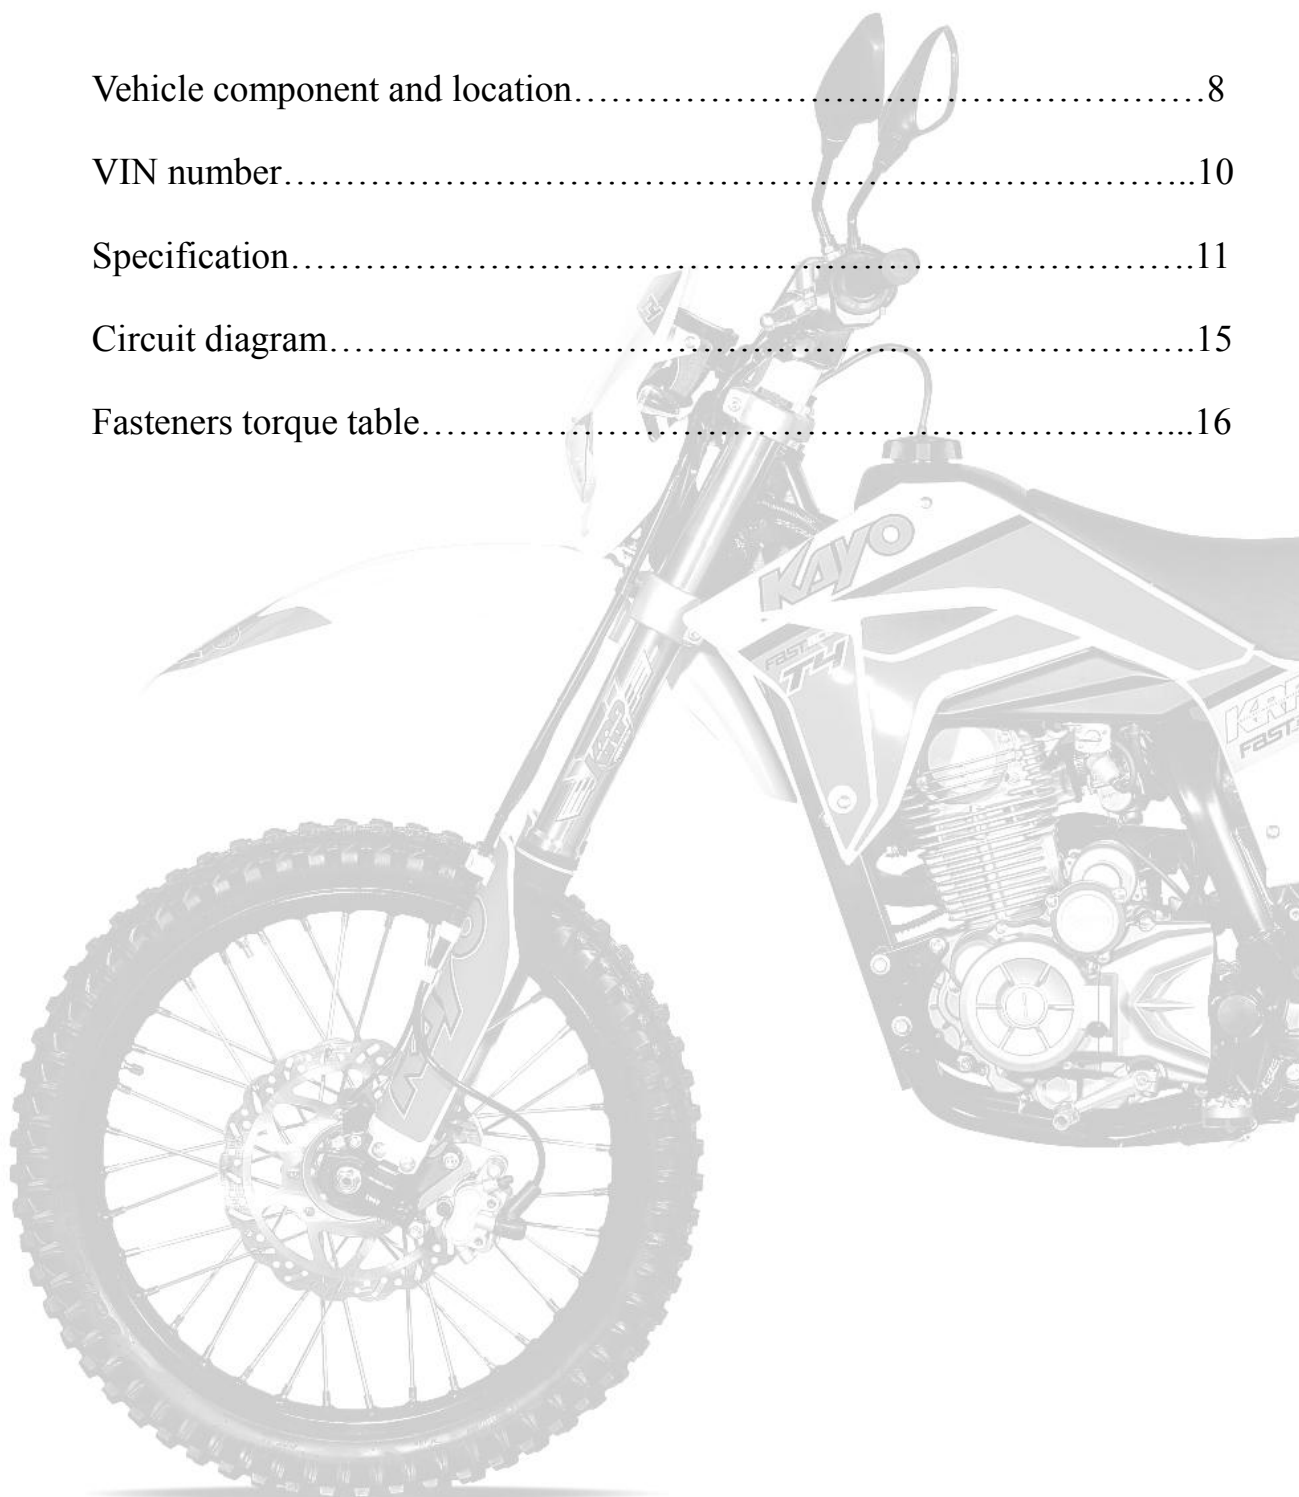

Vehicle component and location

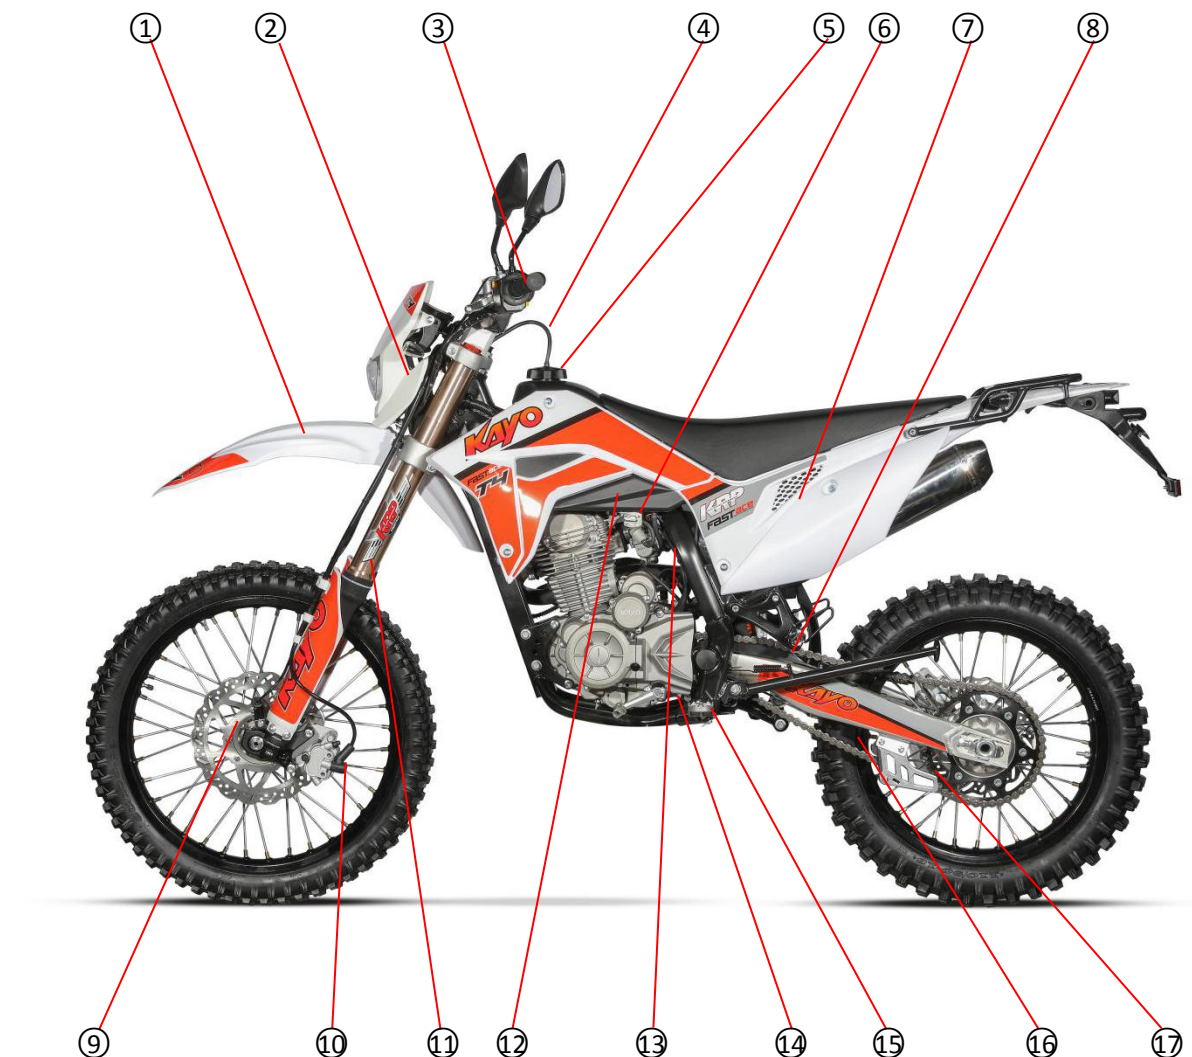


| No. | Name              | No. | Name                |
|-----|-------------------|-----|---------------------|
| 1   | Front fender      | 10  | Front brake caliper |
| 2   | Headlight         | 11  | Front fork          |
| 3   | Handlebar         | 12  | Fuel tank           |
| 4   | Vent pipe         | 13  | Carburetor          |
| 5   | Fuel tank cap     | 14  | Gear shift lever    |
| 6   | Fuel tank petcock | 15  | Pedal               |
| 7   | Air filter        | 16  | Chain               |
| 8   | Chain slider      | 17  | Chain guide         |
| 9   | Front brake disc  |     |                     |

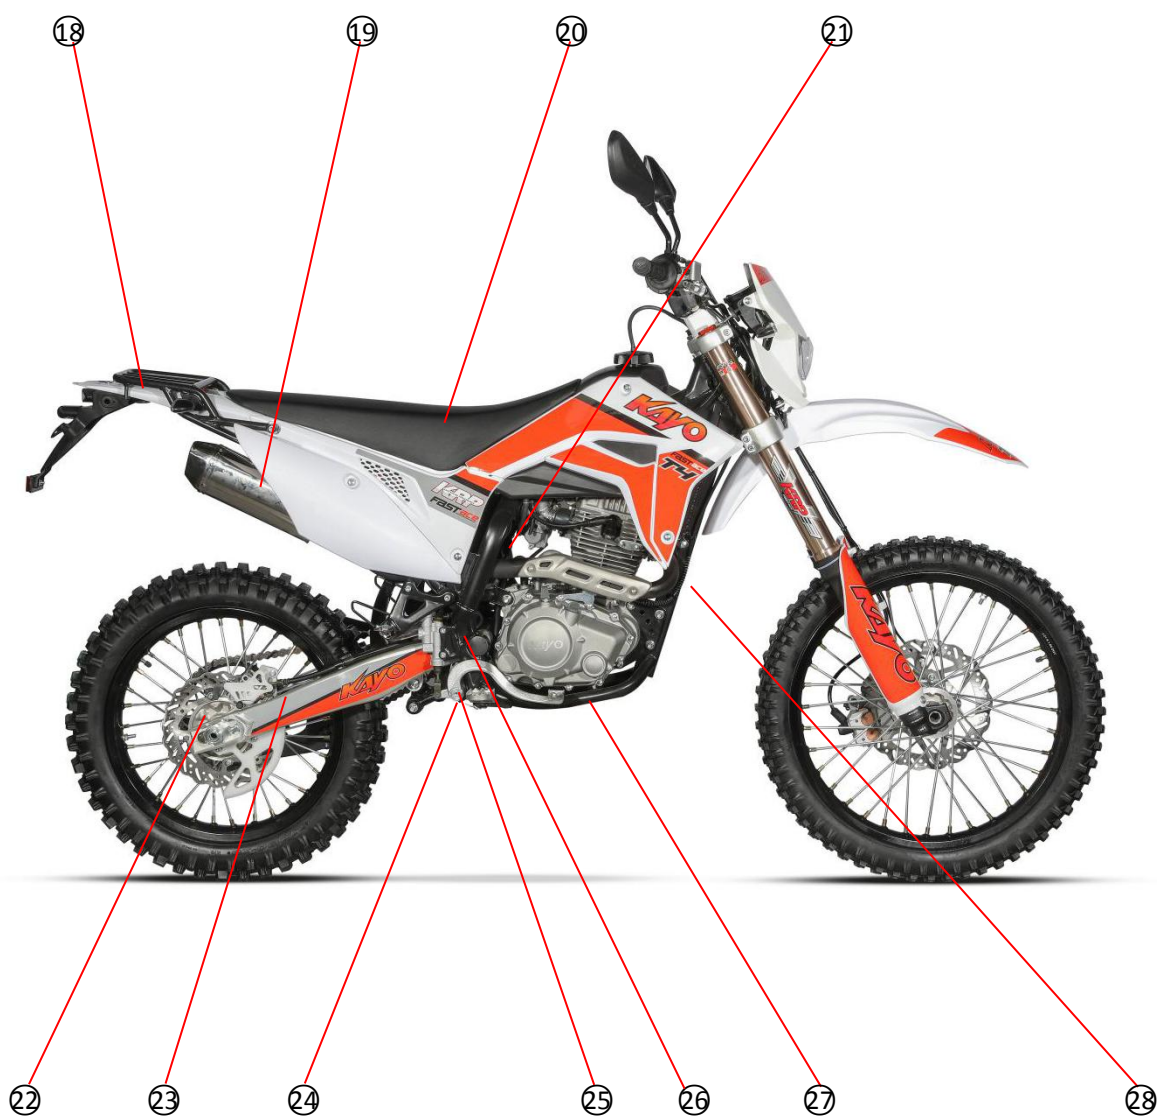

| No. | Name               | No. | Name                |
|-----|--------------------|-----|---------------------|
| 18  | Rear fender        | 24  | U-shape rocker arm  |
| 19  | Muffler            | 25  | Triangle rocker arm |
| 20  | Seat               | 26  | Rear brake oil cup  |
| 21  | Rear shock         | 27  | Brake pedal         |
| 22  | Rear brake disc    | 28  | Muffler pipe        |
| 23  | Rear brake caliper |     |                     |

VIN number

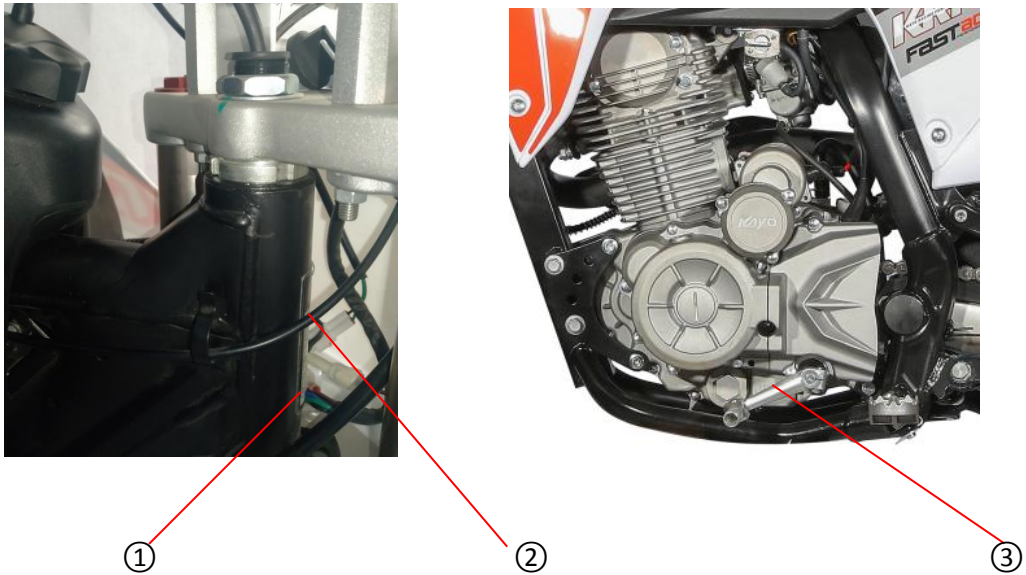

|   |               |                                  |
|---|---------------|----------------------------------|
| ① | VIN number    | Located on frame plate           |
| ② | Frame plate   | Located on frame head tube       |
| ③ | Engine number | Located on engine crankcase body |

## Specification

|                                               |                                                      |
|-----------------------------------------------|------------------------------------------------------|
| T4 (CP250) size and quality parameters        |                                                      |
| Length × width × height (mm)                  | 2195×820×1240                                        |
| wheelbase (mm)                                | 1436                                                 |
| weight (kg)                                   | 107                                                  |
| Tyre spec.                                    | Front 80/100-21; rear 110/90-18                      |
| steering angle                                |                                                      |
| Minimum turning circle diameter               |                                                      |
| Seat height (mm)                              | 925                                                  |
| Ground clearance (mm)                         | 335                                                  |
| Fuel tank capacity (L)                        | 10                                                   |
| engine parameter                              |                                                      |
| Engine type                                   | Single cylinder, four stroke, air - cooled, vertical |
| Clutch type                                   | Wet, multi-plate                                     |
| Cylinder diameter × stroke                    | 65.5×66.2mm                                          |
| method of lubrication                         | Pressure lubrication, splash lubrication             |
| Oil capacity                                  | 1000ml                                               |
| Oil brand                                     | SJ 10W-40                                            |
| displacement                                  | 249.9cc                                              |
| Max power (kw/r/min)                          | 15/8500                                              |
| Max torque (N•m/r/min)                        | 18/6500                                              |
| compression ratio                             | 9.25:1                                               |
| Gear shift type                               | International five gears 1-N-2-3-4-5                 |
| Start method                                  | Electric start                                       |
| Fuel control system                           | PE28 carburetor                                      |
| battery                                       | 12V/2.4Ah lithium battery                            |
| chain                                         | #520H; 13T/45T                                       |
| Frame/shock absorber/braking/wheel parameters |                                                      |
| Frame type                                    | High strength steel tube frame                       |
| Front shock                                   | Inverted double adjustable front shock, L=880mm      |

## ZHEJIANG KAYO MOTOR CO., LTD.

---

|                     |                                                                        |
|---------------------|------------------------------------------------------------------------|
| Rear shock absorber | Compression recovery double adjustable nitrogen balloon shock, L=450mm |
| Rear swing arm      | Aluminum flat fork, L=570mm                                            |
| handlebar           | Aluminum alloy variable diameter handlebar, material 7075 Φ28.6mm      |
| Front&rear rim      | Front 1.60×21, rear 2.15×18; Black aluminum rim, Bright silver hub     |
| Front brake system  | Double piston pump hydraulic brake system, brake disc Φ270mm           |
| Rear brake system   | Single piston pump hydraulic brake system, brake disc Φ240mm           |
| other               |                                                                        |
| Air filter type     | Sponge filter type                                                     |
| Fuel type           | Gasoline No. 92 and above                                              |
| Persons capacity    | 1 person (driver)                                                      |
| Maximum load mass   | 120kg                                                                  |


|                                               |                                                                        |
|-----------------------------------------------|------------------------------------------------------------------------|
| T4 (CP250) size and quality parameters        |                                                                        |
| Length × width × height (mm)                  | 2195×820×1240                                                          |
| wheelbase (mm)                                | 1436                                                                   |
| weight (kg)                                   | 107                                                                    |
| Tyre spec.                                    | Front 80/100-21; rear 110/90-18                                        |
| steering angle                                |                                                                        |
| Minimum turning circle diameter               |                                                                        |
| Seat height (mm)                              | 925                                                                    |
| Ground clearance (mm)                         | 335                                                                    |
| Fuel tank capacity (L)                        | 10                                                                     |
| engine parameter                              |                                                                        |
| Engine type                                   | Single cylinder, four stroke, air - cooled, vertical                   |
| Clutch type                                   | Wet, multi-plate                                                       |
| Cylinder diameter × stroke                    | 65.5×66.2mm                                                            |
| method of lubrication                         | Pressure lubrication, splash lubrication                               |
| Oil capacity                                  | 1000ml                                                                 |
| Oil brand                                     | SJ 10W-40                                                              |
| displacement                                  | 249.9cc                                                                |
| Max power (kw/r/min)                          | 15/8500                                                                |
| Max torque (N•m/r/min)                        | 18/6500                                                                |
| compression ratio                             | 9.25:1                                                                 |
| Gear shift type                               | International five gears 1-N-2-3-4-5                                   |
| Start method                                  | Electric start                                                         |
| Fuel control system                           | PE28 carburetor                                                        |
| battery                                       | 12V/2.4Ah lithium battery                                              |
| chain                                         | #520H; 13T/45T                                                         |
| Frame/shock absorber/braking/wheel parameters |                                                                        |
| Frame type                                    | High strength steel tube frame                                         |
| Front shock                                   | Inverted double adjustable front shock, L=880mm                        |
| Rear shock                                    | Compression recovery double adjustable nitrogen balloon shock, L=450mm |

## ZHEJIANG KAYO MOTOR CO., LTD.

---

|                     |                                                                        |
|---------------------|------------------------------------------------------------------------|
| Rear shock absorber | Compression recovery double adjustable nitrogen balloon shock, L=450mm |
| Rear swing arm      | Aluminum flat fork, L=570mm                                            |
| handlebar           | Aluminum alloy variable diameter handlebar, material 7075 Φ28.6mm      |
| Front&rear rim      | Front 1.60×21, rear 2.15×18; Black aluminum rim, Bright silver hub     |
| Front brake system  | Double piston pump hydraulic brake system, brake disc Φ270mm           |
| Rear brake system   | Single piston pump hydraulic brake system, brake disc Φ240mm           |
| other               |                                                                        |
| Air filter type     | Sponge filter type                                                     |
| Fuel type           | Gasoline No. 92 and above                                              |
| Persons capacity    | 1 person (driver)                                                      |

## Circuit diagram

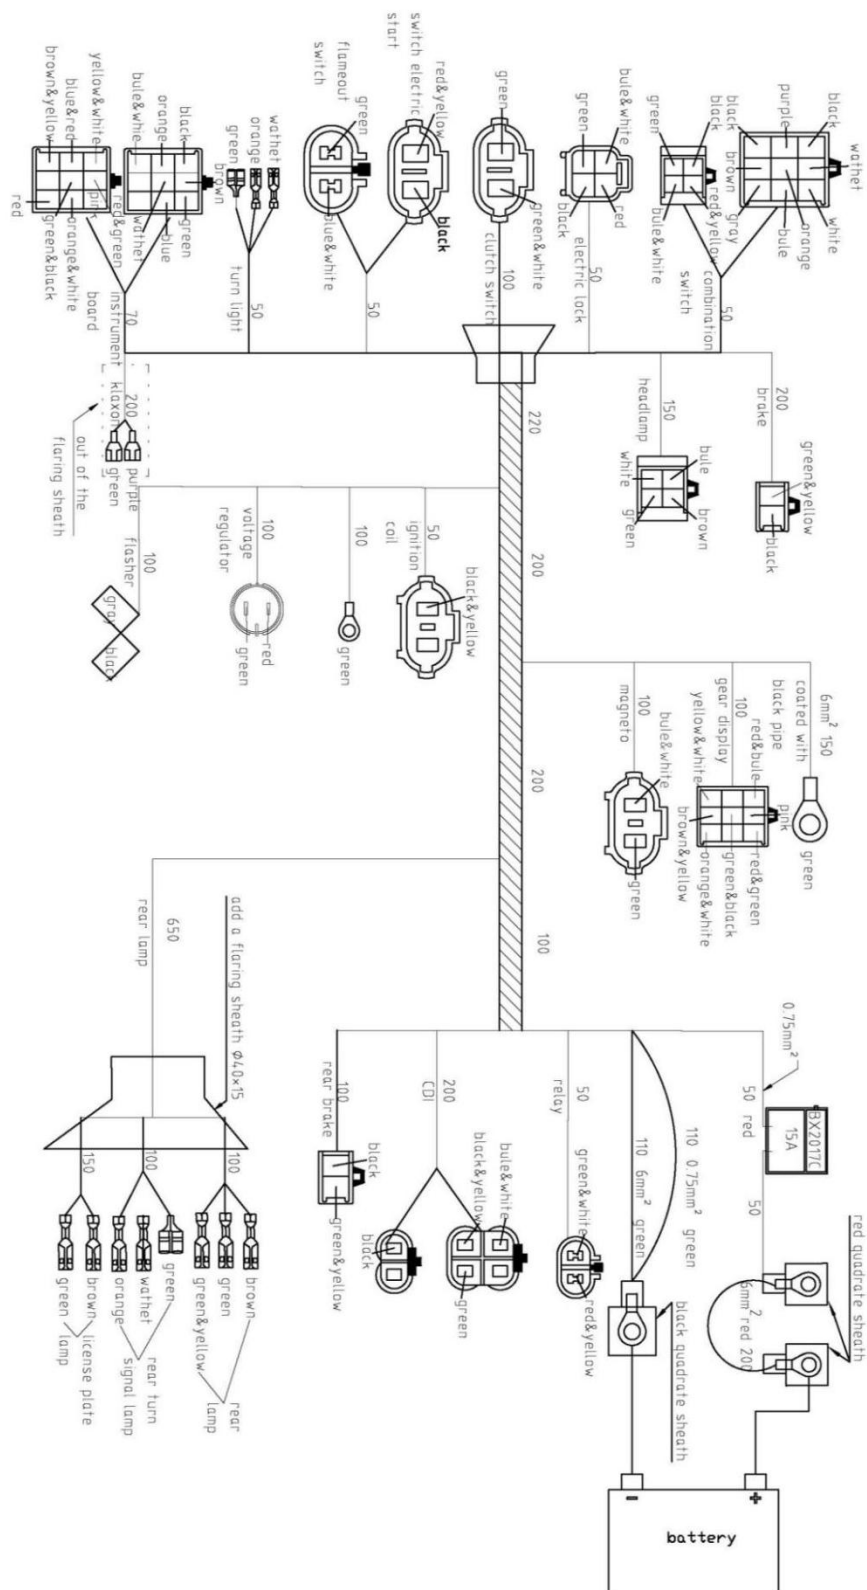

## Fastener torque table

**Note:** before installing the thread, apply anti-rust grease on the thread and joint surface.

| No. | Item                                     | Fastener specification | Qty | Torque (N•m) |
|-----|------------------------------------------|------------------------|-----|--------------|
| 1   | Front brake caliper mounting bolt        | M8×40 full thread      | 2   | 20~32        |
| 2   | front brake shield mounting screw        | M6×16                  | 2   | 7~11         |
| 3   | steering column screw                    | 铝制银色                   | 1   | /            |
| 4   | Upper lock block mounting screw          | M8×30                  | 4   | 20~32        |
| 5   | Front brake disc mounting bolt           | M6×16                  | 6   | 7~11         |
| 6   | Front wheel axle mounting nut            | M16×1.5×H14            | 1   | 175~218      |
| 7   | Footpedal seat mounting bolt             | M8×20 full thread      | 2   | 20~32        |
| 8   | shift lever mounting bolt                | M6×25                  | 1   | 7~11         |
| 9   | Engine hanger bolt                       | M8×60                  | 3   | 20~32        |
| 10  | Engine mounting nut                      | M10×1.25               | 2   | 40~70        |
| 11  | Water tank mounting screw                | M6×25                  | 4   | 7~11         |
| 12  | Exhaust pipe mounting nut                | M8                     | 2   | 20~32        |
| 13  | Chain guider mounting screw              | M6×12                  | 3   | 7~11         |
| 14  | Swing arm axle mounting nut              | M16×1.5×H14.8          | 1   | 175~218      |
| 15  | Triangle linkage mounting nut            | M12×1.25               | 3   | 68~85        |
| 16  | Chain adjustment bolt                    | M10×40×1.25 S14        | 2   | 36~55        |
| 17  | Chain adjustment nut                     | M10×1.25               | 2   | 40~70        |
| 18  | Rear shock and frame connection bolt     | M10×50×1.25            | 1   | 40~70        |
| 19  | oval head bolt                           | M10×42×1.25+Φ10×28     | 1   | 40~70        |
| 20  | Rear brake disc mounting bolt            | M6×16                  | 4   | 7~11         |
| 21  | Rear sprocket mounting screw             | M8×31 10.9 级           | 6   | 27~35        |
| 22  | Rear wheel axle nut                      | M22×1.5                | 1   | 452~550      |
| 23  | Rear brake shield mounting bolt          | M6×12                  | 4   | 7~11         |
| 24  | Brake pedal head mounting screw          | M5×10 full thread      | 2   | 4~7          |
| 25  | brake limit bolt                         | M8×20 full thread      | 1   | 20~32        |
| 26  | Rear brake pump mounting bolt            | M6×16 full thread      | 2   | 7~11         |
| 27  | brake pedal bolt                         | M6×25 full thread      | 1   | 7~11         |
| 28  | Ignition coil mounting bolt              | M6×20                  | 2   | 7~11         |
| 29  | Plastics mounting bolt                   | M6×16 full thread      | 10  | 7~11         |
| 30  | CDI mounting bolt                        | M6×16 full thread      | 2   | 7~11         |
| 31  | voltage regulator mounting bolt          | M6×25 full thread      | 2   | 7~11         |
| 32  | Electric switch lock bracket bolt        | M6×12                  | 2   | 7~11         |
| 33  | Fuel tank switch mounting screw          | M5×12 full thread      | 2   | 4~7          |
| 34  | front mudguard bolt                      | M6×12                  | 4   | 7~11         |
| 35  | Left and right guard plate and fuel tank | M5×10 full thread      | 6   | 4~7          |


## ZHEJIANG KAYO MOTOR CO., LTD.

---

|    |                       |           |    |       |
|----|-----------------------|-----------|----|-------|
|    | connection screw      |           |    |       |
| 36 | Cross head screw      | ST 4.2×12 | 10 | /     |
| 37 | Cross flat head screw | M6×10     | 4  | /     |
| 38 | sparking plug         | /         | 1  | 25~30 |

## OPERATION INSTRUCTIONS

|                                  |    |
|----------------------------------|----|
| Check before riding .....        | 19 |
| Starting steps .....             | 21 |
| Vehicle run in.....              | 23 |
| Vehicle cleaning .....           | 23 |
| Storage and use of vehicles..... | 24 |

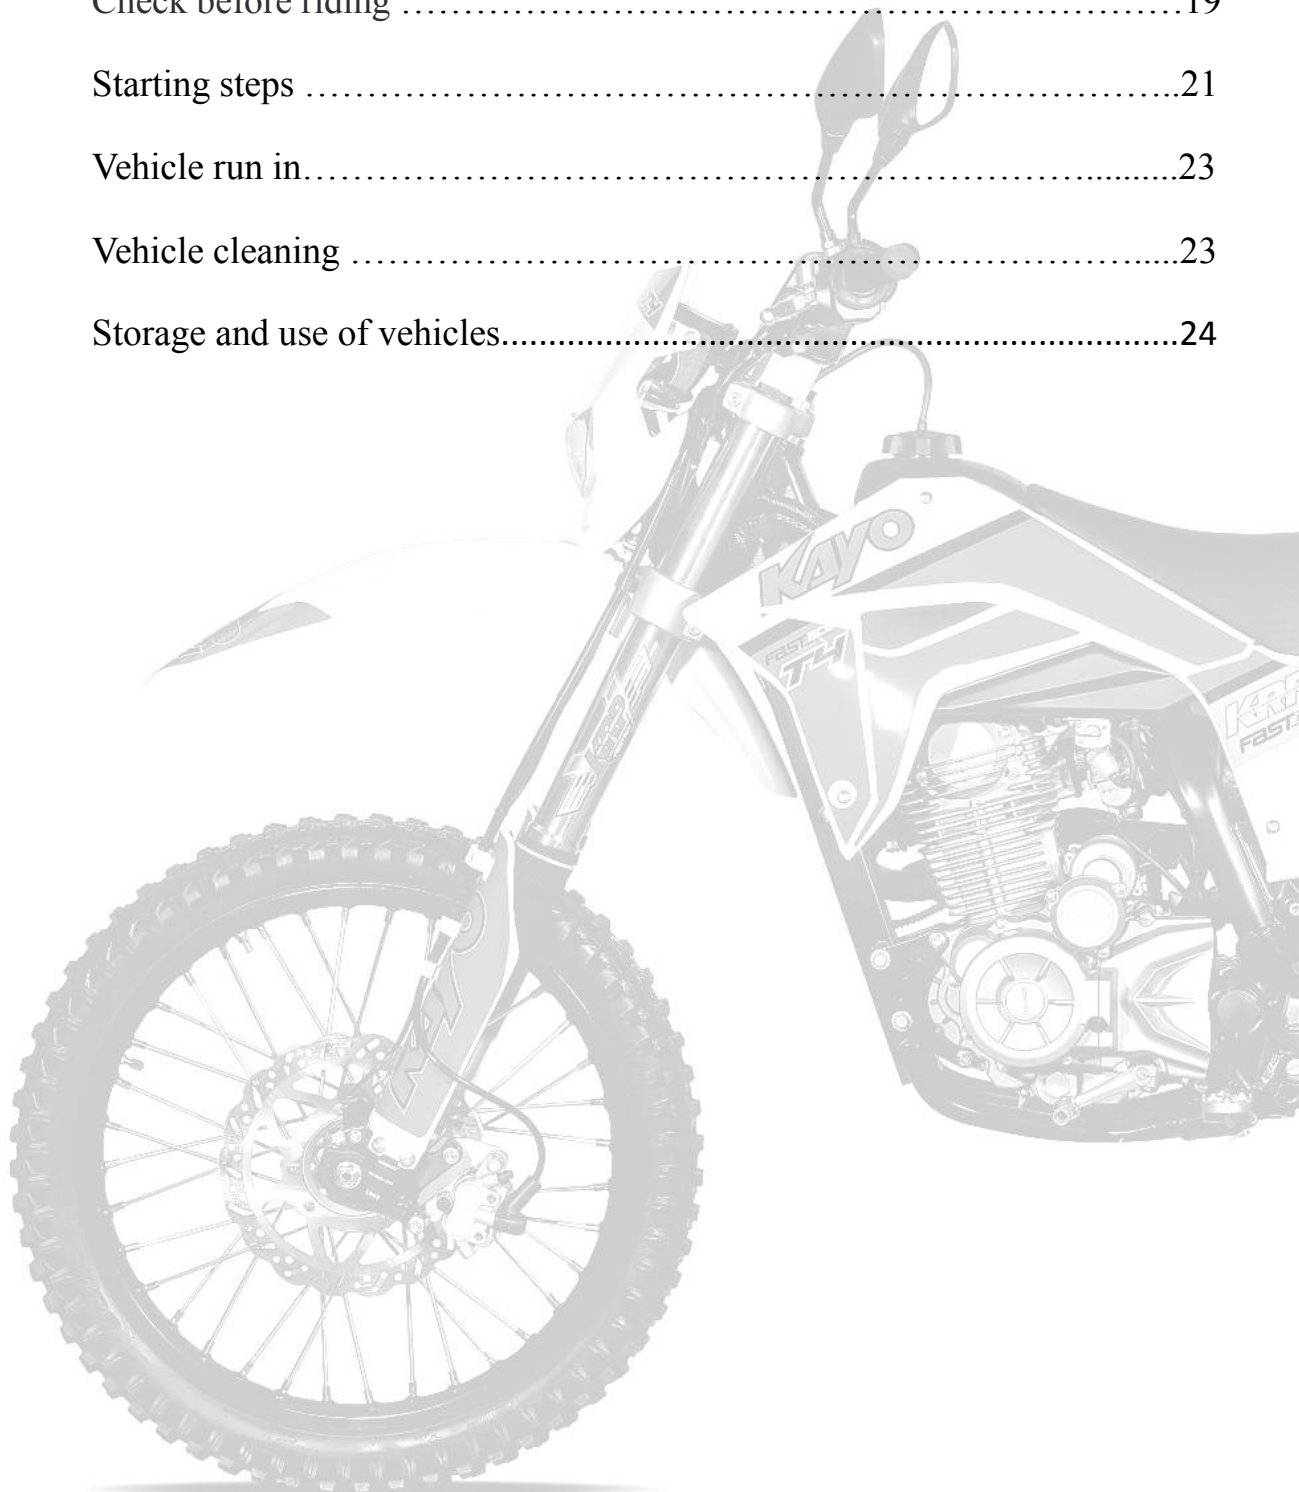

## Check before riding

### 1.fuel is sufficient or not

Open the tank cap and shake the handlebars, and observe the fuel allowance by observing the level of the tank and listening to the sound. If there is less fuel, please add fuel to ensure normal riding.



### 2.the fuel tank switch is on or not


There are three positions of the fuel tank switch in this motorcycle, from top to bottom: RES (the auxiliary fuel tank is open), OFF (the fuel tank switch is closed), ON (the fuel tank switch is open). If the fuel tank switch is OFF, there is no fuel in the carburetor and the engine cannot run. If fuel is scarce in the tank, switch the tank to the RES position and refuel immediately. If fuel is sufficient and the motorcycle is in good condition, switch to ON.

**Note:** when the engine is turned off, turn the tank switch to OFF.



### 3. Whether the engine oil is sufficient

Observe the lubricating oil level in the engine through the engine oil ruler. If the level is close to or lower than "L", which is the lowest oil quantity line, then add lubricating oil immediately, lubricating oil is added to close to or slightly lower than "H", which is the maximum capacity line.

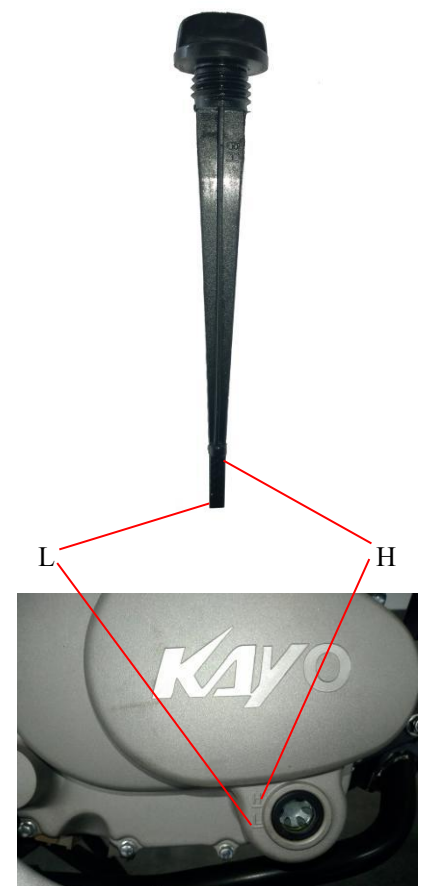

### 5.Brake calipers' brake pad abrasion

Check the caliper brake pad's thickness, if the brake pad's thickness is less than the minimum thickness, the brake pad must be replaced. Check the caliper brake pad for damage or crack. If there is damage or crack, a new brake pad should be replaced.

Minimum thickness of brake pad:

Front MIN = 1 mm

Rear MIN = 1 mm

Note: the brake pad should be replaced in a complete set. If you are not sure to complete the replacement work, please go to the KAYO dealer to do the professional replacement.

Brake pad



Brake disc

### 6. brake disc's abrasion of brake system

Check whether there is damage to the brake disc surface, and check the thickness, if the brake disc is less than the limit thickness, the brake disc must be replaced immediately.

Limit thickness of brake disc:


Front MIN=3.5mm

Rear MIN=3.5mm

### 7.Check tyre pressure

Use the pressure gauge to check whether the tire pressure level is in line with the standards, If often appears the pressure minor problem, check whether the tire is leaking. If a leaking is found, please contact the dealer of KAYO. Recommended pressure: front 2.23 bar (2.23 kgf /cm<sup>2</sup>); rear 2.77bar (2.77 kgf /cm<sup>2</sup>).

**Note:** the tire pressure check should be done under cooling conditions. If riding under an inappropriate pressure, will make the operation and ride comfort worse, resulting in tire wear and other adverse effects.

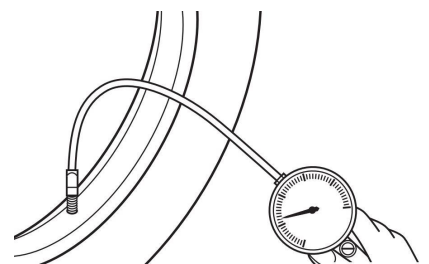

### 8.Check spoke tension

Touch the two adjacent spokes with your fingers to check whether there is a lack of tension in the spokes. If the spokes are found loose and weak, must check all the spokes, and check both wheels. If there is any problems, please contact the dealer of KAYO.



### 9. Check the chain and its supporting facilities

Check whether the chain is tensioned or not. If the chain is too loose, it can be adjusted by the chain adjuster to the right position. Do not make the chain too tight.

**Note:** if the chain needs to be tensioned frequently, or if you find any signs of wear on the front sprocket, rear sprocket and chain, please contact KAYO dealer for a thorough inspection to avoid safety problems.



chain adjuster  
Exhaust screw

### 10. Check whether the front shock absorber needs to vent

When the ambient temperature is high, the gas in the shock absorber is heated and expands. At this time, it is necessary to exhaust the gas through the exhaust screw at the front and the upper end. Otherwise, it is easy to expand and damage the oil seal, which will affect the use of the shock absorber.



### 11. Inspection of the remaining components

Inspect the motorcycle cover through the eyes to see if there is a risk of falling off. If there is the possibility of falling off, then reinforce the cover. Check the seat cushion for comfort and the battery charge is sufficient or not.

T2-G model also need to check whether the lamps are normal.

**Note:** if there is a large number of problems, please contact the KAYO distributor.

The behavior of checking before riding won't take you much time, but it can help you develop good riding habits and make your daily riding easier and safer.



### starting steps

The steps to kick start as follows (if with foot starting lever)

1. Switch the fuel tank to the "ON" position;
- 2, the left hand pinch clutch handlebar;
- 3, the right hand pinch the brake handle;
4. Pedal the foot starting lever vigorously with the right foot;
5. The engine starts to work, and the starting lever is pushed back to its



Clutch handlebar

original position. The vehicle starts finished.

The electric starting steps are as follows:

1. Switch the fuel tank to the "ON" position;
2. Open the electric lock;
- 3, the left hand pinch clutch handlebar;
- 4, the right hand pinch the brake handle;
5. Hold the ignition switch with the right finger;
6. The engine starts and the starts finished.

Note: when the vehicle starts, the brake should be pinched to prevent the vehicle from starting with gear.



Start lever

ignition switch



### Vehicle run in

Motorcycle engines have many parts that make relative movements, such as pistons, piston rings, cylinder blocks, and meshing transmission gears. Therefore, in the initial stage of use, the engine must be regularly run-in. The running-in can adapt the moving parts to each other, correct the working gap, and form a good smooth friction surface that can withstand large loads. Only after the running-in engine is standardized can it have excellent performance and reliability.

The recommended running-in steps are as follows:

1. 0 ~ 4.5h stage: when using a motorcycle at 50% ~ 75% throttle, the speed should be changed frequently to avoid the motorcycle running at the same throttle for a long time; after each hour of work, let the engine cool for 5 ~ 10 minutes; Avoid rapid acceleration, and the throttle cannot be too large and small.
- 2, 4.5 ~ 7h stage: work under 50% ~ 75% throttle, at this time, the motorcycle can run at the same throttle for a long time. During the work, the throttle can reach 100%, but the duration is not higher than 5-10 seconds;
- 3, 7 ~ 10h stage: Use motorcycles at 75% ~ 100% throttle.
4. Above 10h: Increase the speed to 60 ~ 80km / h, knowing that the engine performance can be fully exerted.

**DANGER:** When driving a motorcycle, please do not accelerate at all costs. This behavior can easily lead to engine damage and safety accidents. Therefore, please pay attention to certain driving skills when using a motorcycle.

### Vehicle cleaning

Vehicle cleaning is also an important part of the daily use and maintenance of motorcycles. Regular cleaning of your motorcycle can keep your vehicle in good motion and prolong its service life. Here are the steps you can take to clean your motorcycle:

1. Plug the exhaust system to prevent water from entering;
2. Seal the electric door lock and each connector with tape;
3. Use low-pressure water spraying device to remove mud and dirt on the surface;
4. Clean special dirty places with special motorcycle cleaner;
5. Rinse with low pressure water;
6. Let the motorcycle air dry naturally;
7. Drive the motorcycle for a short time until the engine reaches the working temperature;
8. Lubricate the chain and all other components that need lubrication.

**Warning:** Never use high pressure water to clean the vehicle. Avoid direct contact of water flow with coils, pipe plugs, carburetor or any electrical components.

## Storage and use of vehicles

When you plan to store your vehicle for long periods of non-use, follow these steps:

1. Block the exhaust pipe;
2. Thoroughly clean the motorcycle;
3. Wait for the motorcycle to air dry naturally;
4. Start the engine for about 5 minutes to heat the lubricating oil, and then empty the oil from the engine;
5. Add new engine lubricant to the engine;
6. Empty the fuel tank (if it is not used for a long time, the gasoline will deteriorate);
7. Lubricate the chain;
8. Apply oil to all unpainted metal surfaces to avoid rusting;
9. Keep motorcycle wheels floating when storing motorcycles. If this condition cannot be met, cardboard can be used under motorcycle tires.
10. Cover the motorcycle to prevent dust and dirt from adhering.


Note: When applying anti-rust oil, do not splash the oil on the brakes and rubber parts, otherwise the rubber may deteriorate.

After the motorcycle is stored for a long time, please follow these steps before putting it into use:

1. Remove the obstruction in the exhaust pipe;
2. Tighten the spark plug;
3. Fill the fuel tank with fuel;
4. Check the inspection items before daily driving;
5. conventional lubrication of motorcycles.

## Routine maintenance

|                                   |    |
|-----------------------------------|----|
| Maintenance Periodic Table.....   | 26 |
| Specific maintenance content..... | 27 |

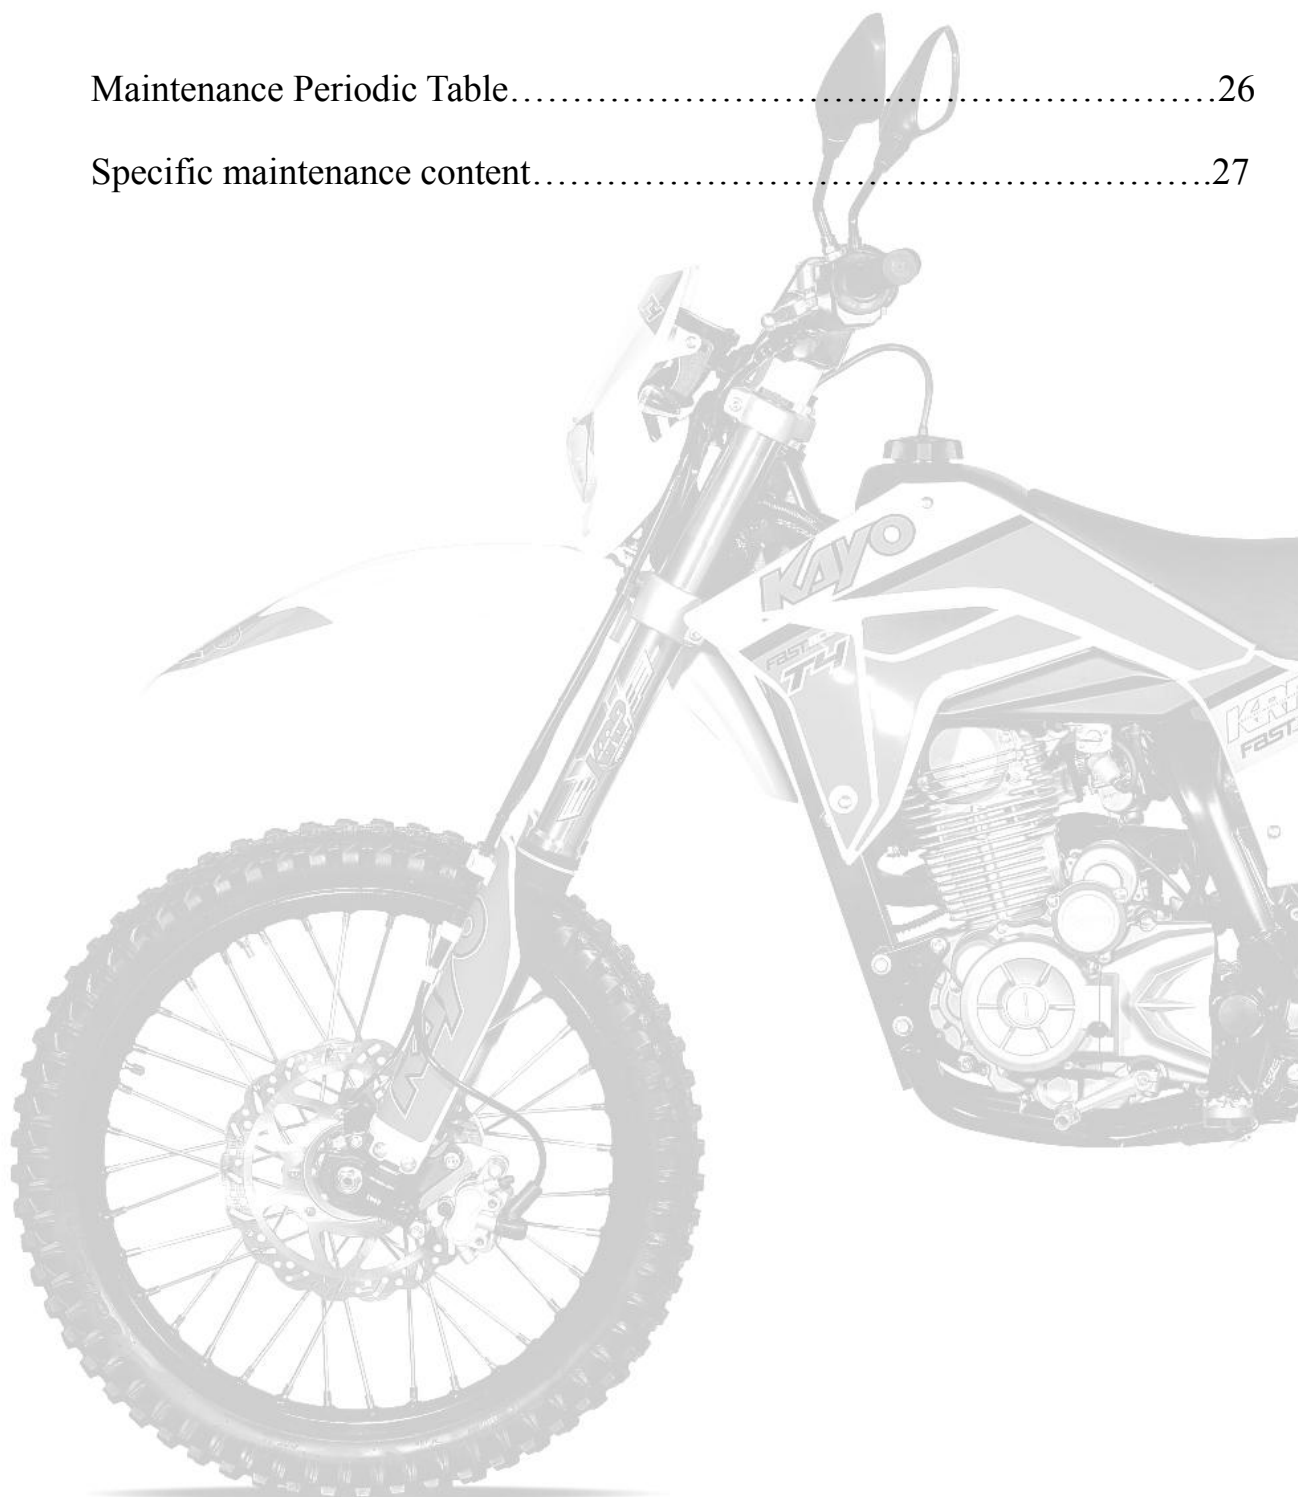

## Maintenance Periodic Table

|                                                                                               | Every 10 hours/after racing | Every 20 hours | Every 30 hours |
|-----------------------------------------------------------------------------------------------|-----------------------------|----------------|----------------|
| Once after 1 hour of riding                                                                   |                             |                |                |
| Check and charge the battery                                                                  | ●                           | ●              | ●              |
| Check the front disc brake pads                                                               | ●                           | ●              | ●              |
| Check the rear disc brake pads                                                                | ●                           | ●              | ●              |
| Check the front and rear disc brakes                                                          | ●                           | ●              | ●              |
| Inspect the brake hose for damage or leaks                                                    | ●                           | ●              | ●              |
| Check the rear disc brake fluid level                                                         | ●                           | ●              | ●              |
| Checking the free travel of the brake pedal                                                   | ●                           | ●              | ●              |
| Checking the frame and rocker                                                                 | ●                           | ●              | ●              |
| Check if the rocker bearing is loose                                                          |                             | ●              |                |
| Check the Heim connector on the top of the shock absorber                                     | ●                           | ●              | ●              |
| Check shock absorber connecting rod                                                           | ●                           | ●              | ●              |
| Check the condition of the outer surface of the tire                                          | ○                           | ●              | ●              |
| Check tire pressure                                                                           | ○                           | ●              | ●              |
| Check if the hub bearing is loose                                                             | ●                           | ●              | ●              |
| Check the wheel                                                                               | ●                           | ●              | ●              |
| Check for rim edge runout                                                                     | ○                           | ●              | ●              |
| Check spoke tension                                                                           | ○                           | ●              | ●              |
| Check the chain, rear sprocket, engine sprocket, chain guide and chain stopper                | ●                           | ●              | ●              |
| Checking chain tension                                                                        | ○                           | ●              | ●              |
| Oil all moving parts (such as chains, handles, etc.) and check for smooth operation           | ●                           | ●              | ●              |
| Check the front disc brake fluid level                                                        | ●                           | ●              | ●              |
| Checking the free travel of the brake lever                                                   | ●                           | ●              | ●              |
| Check if the steering head bearing is loose                                                   | ○                           | ●              | ●              |
| Check valve clearance                                                                         | ○                           |                | ●              |
| Check clutch                                                                                  |                             | ●              |                |
| Replace the cap seal and shaft seal ring of the pump                                          |                             |                | ●              |
| Change oil and oil filter, clean oil filter                                                   | ○                           | ●              | ●              |
| Inspect all hoses (such as fuel, exhaust, etc.) and bushings for cracks, leaks, and incorrect | ○                           | ●              | ●              |
| Inspect cables for damage and sharp bends                                                     | ●                           | ●              | ●              |
| Check that the throttle cable is intact, without sharp bends, and set correctly               | ○                           | ●              | ●              |
| Cleaning the air cleaner and air cleaner case                                                 | ●                           | ●              | ●              |
| Check that the screws and nuts are tight                                                      | ○                           | ●              | ●              |
| Replace the fuel filter                                                                       | ○                           | ●              | ●              |
| Checking the carburetor idle speed                                                            | ○                           | ●              | ●              |
| Final inspection: check if the vehicle is running safely and test run                         | ○                           | ●              | ●              |

○ One time interval

● Periodic interval

**Note: This table is for reference only. Please adjust the specific cycle according to the use of the motorcycle.**

**Warning: For inspection, adjustment and replacement of engine parts, please consult Kayo**

**Service Center to avoid damage to the engine.**


## Specific maintenance content

### 1. Clutch handle

The clamping force of the clutch handle can be adjusted according to your actual needs:

By adjusting the nut, the clamping force of the clutch lever can be changed. This adjustment does not change the internal structure of the clutch, so it will not affect the normal use of the clutch.

Note: The clamping force of the clutch handle should not be adjusted too much, otherwise the clutch line will be easily broken.

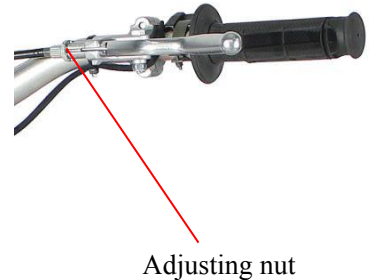

### 2. Clutch disc

For the inspection, adjustment and replacement of this item, please refer to the engine maintenance manual for details. If you are not sure of the independent completion, please contact the KAYO dealer.

### 3. Throttle turn

Turn the throttle handle by hand to check whether it is smooth and flexible.


Check whether the throttle cable has a free travel of 10-20mm;

If the free travel is insufficient, adjust as follows:

Loosen the lock nut at the end of the throttle cable,

Rotate the adjuster for best results,

Then tighten the lock nut.

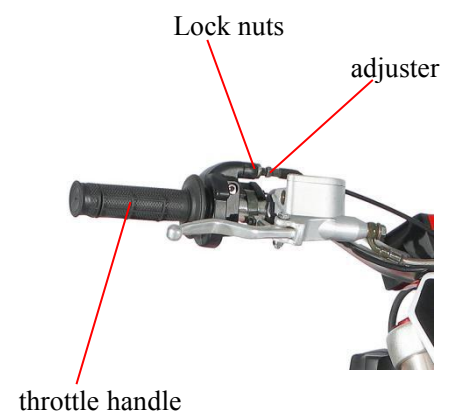


#### 4. Spark plug

Engine spark plug torque is 25-30N • m.

The spark plug must be removed regularly to check the distance (0.6 to 0.7 mm) between the electrodes. If the spark plug contains oil or cinder, wipe it off with a wire brush or similar. Measure the distance between the electrodes with a measuring instrument and adjust it to prevent abnormal bending of the external electrodes. If the spark plug electrode is rusted, damaged, or the insulator is broken, the spark plug must be replaced.

Note: The spark plug should be checked every 10 hours and replaced every 20 hours.

Note: If engine performance decreases, replace spark plug to restore normal performance

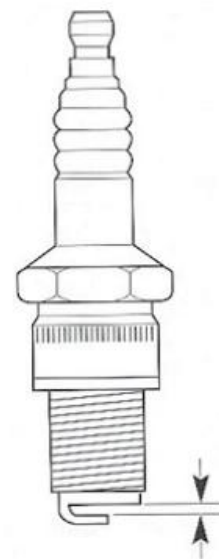

#### 5. Air filter

The air filter should be checked on time, as follows:

Remove the seat cushion;

Remove the air filter cover;

Check the air filter.

Installation and restoration are performed in the reverse order of removal.

Danger: The air filter should be cleaned regularly to prevent dust or dirt from entering the engine, which may cause engine wear or even damage. Filters should be cleaned in a well-ventilated area and ensure that there are no sparks, flames, or strong heat sources (such as a high-power bulb) in the workplace. Never use gasoline to clean the filter, as this can easily lead to accidents.

Warning: If it is checked that the filter is damaged, it must be replaced immediately, otherwise dirt will enter the carburetor and there is a risk of accident. When installing the air filter, it is required to lubricate all connections and threads.



seat

Air filter cover



## 6. Carburetor

Throttle screws and air screws allow idle speed adjustment of the carburetor. The steps are as follows:

Turn the air screw clockwise until it reaches the top of its stroke and reverse one and a quarter turns;

Adjust the throttle screw to ensure that the engine can run at a certain speed when the throttle lever is fully relaxed;

Adjust the throttle screw to reduce the engine speed as much as possible;

Adjust the air screw to make the engine speed as high as possible;

Repeat the above steps until a satisfactory speed is obtained;

Check if the throttle cable is working properly.

Danger: Driving a motorcycle with a damaged throttle cable is undoubtedly a very dangerous behavior. A normal throttle cable should have a free travel of at least 10mm. Start the engine and turn the handlebar left and right. If the engine stalls or accelerates due to the movement of the handlebar, the throttle cable is not adjusted properly or damaged. Make sure the throttle cable is normal before driving the motorcycle.



throttle screw  
air screw

## 7. Engine oil

Lubricating oil is a very important part of normal engine operation. Insufficient lubricant, deterioration or pollution can cause engine wear and damage.

### Oil level check

If the motorcycle has just been used, wait for a few minutes after the engine has stopped to check;

Observe the amount of lubricating oil in the engine through the oil dipstick. The status of the CP250 engine of the T4 model can be observed through the oil level hole;

The level of lubricating oil in the engine should be between the maximum and minimum values, that is, between "H" and "L";

If the oil level is too high, remove excess oil through the drain bolt;

If the oil level is too low, add oil through the cap.

Note: The added lubricant should be the same as the original organic oil grade in the engine.

Recommended oil brands and brands are:

Shell lubricants SJ 10W-40

Maximum oil capacity: 1000ml

### Change of lubricant

Lubricants need to be changed regularly to ensure the life of the engine.

The replacement steps are as follows:

Start the engine and let it work for 5 minutes to mix the sediment with the



oil;

Stop the engine and place the container under the engine;

Unscrew the oil drain bolt and place the motorcycle above the container, so that all the oil can be smoothly discharged;

Open the oil injection hole so that the oil can be better discharged;

Clean the oil drain bolt;

Tighten the oil drain bolt, the torque is  $68 \sim 84\text{N} \cdot \text{m}$ ;

Pour new oil through the oil filling hole;

Start the engine and observe the oil level. If the oil is insufficient, shut down the engine, continue to pour in the lubricant, and repeat the operation 3 to 4 times until the oil level meets the requirements;

Close the oil fill hole and tighten the hole cover.

### 8. Piston and piston ring

For the inspection, adjustment and replacement of this project, please refer to the engine maintenance manual for details. If you are not sure of the independent completion, please contact the KAYO dealer.

### 9. Cylinder, cylinder head and exhaust valve

For the inspection, adjustment and replacement of this item, please refer to the engine maintenance manual for details. If you are not sure of the independent completion, please contact the KAYO dealer.

### 10. Exhaust system inspection

Exhaust pipe and muffler can guide gas emission and reduce noise.

If the exhaust pipe is rusted or damaged due to impact, please replace it with a new one immediately. If the noise is too high or the engine performance is reduced, replace the muffler.

For cleaning of the exhaust system, please consult your KAYO dealer.

If you need to replace the muffler, follow these steps:

Unscrew the lower right protective plate fixing screw;

Unscrew the upper right protective plate fixing screw;

Unscrew the connecting bolt between the muffler and the rear attachment beam;

Pull out the muffler backward;

Replace the muffler and replace the fasteners;


Note: In the CP250 state, you need to unscrew the connection bolt between the muffler and the frame and loosen the connection clip between the muffler and the exhaust pipe.

Fasteners are installed in the reverse order of removal.

### 11. Crankshaft connecting rod and bearing



oil drain bolt

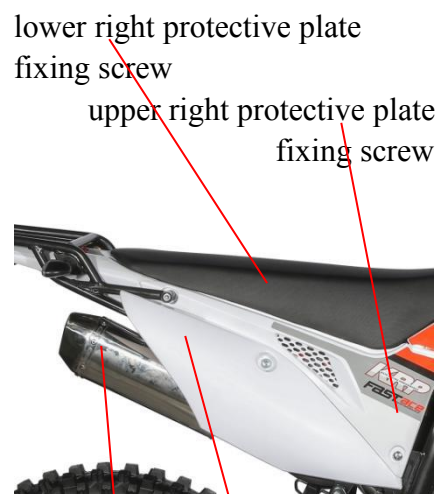

Connecting bolt  
muffler

For the inspection, adjustment and replacement of this item, please refer to the engine maintenance manual for details. If you are not sure of the independent completion, please contact the KAYO dealer.

### 12. Starter, shift pedal and brake pedal

Lubricate the movement and joints with oil or grease, as excessive lubrication may cause the boots to slip on the pedals and affect riding.

### 13. Inspection of control system of brake system

Front brake handle:

The front brake lever can be adjusted to suit the operating habits of different groups of people.

Rear brake pedal:

Under normal circumstances, the brake pedal should have a free travel of 20 to 30 mm. Check the brake lever to see if the stroke is correct.

Danger: Please test the braking system (including front brake and rear brake) before starting each motorcycle. If you feel soft when pinching the brake lever or pressing the brake pedal, there may be air in the pump or oil circuit, or One or more parts of the braking system are in poor condition. If this happens, please check the brake system immediately and contact KAYO dealer.



### 14. Brake system wear inspection

Check the thickness of the front and rear brake caliper brake pads. The thickness should be not less than 1mm. If the brake pad thickness is less than or equal to the minimum thickness, the entire set of brake pads should be replaced immediately.

Check the thickness of the front and rear brake discs. If the measured result is less than the limit thickness of the brake discs. The brake disc should be replaced immediately.

Limit thickness of brake disc: front MIN = 3.5mm; rear MIN = 3.5mm

Danger: If it is checked that the brake system is too worn, you should replace the corresponding parts immediately to avoid causing a safety accident. The specific replacement should be performed after consulting the KAYO dealer.



caliper brake pads

Brake disc

## 15.Brake fluid

The brake fluid must be inspected and replaced regularly. If water, mud or other particulate matter is mixed in the brake fluid, the brake fluid should also be replaced.

DOT4 brake fluid is recommended.

**DANGER:** Do not mix different types of brake fluid into the brake system for use. The use of brake fluid must meet braking requirements. Do not use the brake fluid in an unsealed container. The brake fluid will deteriorate when exposed to air, which will affect the braking effect. Do not use used brake fluid.



## 16, brake fluid volume check

Check the brake fluid level through the brake fluid level observation hole. The liquid level should be more than half of the observation hole, that is, the liquid level should be higher than "LOWER". If the brake fluid is insufficient, add it immediately.

**Note:** Do not allow the brake fluid to splash on the painted surface, which may cause corrosion.

**Danger:** Please check whether the brake fluid leaks or the brake fluid pipe is damaged. If leakage occurs, please contact KAYO dealer.

## 17. Inspection of brake pump piston and dust cover

For the inspection, adjustment and replacement of this item, please consult with KAYO dealers.

## 18.Spokes and wheels

The spokes should be tightened evenly to prevent the tire center from shifting. If the center of the tire is offset, some spokes will be stretched, which will easily deform or even break.

If the inspection shows that the tire center is slightly off-center, you can use a tension wrench to loosen or tighten some spokes to correct it. If the tire is bent or severely deformed, replace the tire immediately.

**Warning:** The inspection and adjustment of spokes and wheels requires related expertise. We recommend that you consult your KAYO dealer or directly at the dealer.



### 19.Chain guide check

Check the guide bush and chain stopper for wear on the flat fork. Under normal circumstances, these two can play a role in guiding the chain movement. However, if it is worn too much, it is not conducive to the normal movement of the chain and affects its turning effect. Therefore, the excessively worn guide bushings and chain stoppers should be replaced in time to ensure that the motorcycle works normally.

chain guide



chain stopper

### 20.Front shock absorber inspection

Check the front shock absorber, and if necessary, deflate the front shock absorber with the exhaust screw.

Note: When performing deflation operation, please place the motorcycle on the fixed bracket so that the front wheels can be completely suspended. After placing the motorcycle on the ground, press the handlebars by hand to test whether the spring back is sensitive after pressing down. Our T4 models use FASTACE dual adjustable front shock absorbers, whose damping hardness can be adjusted by adjusting screws.

exhaust screw



adjusting screw

If you wish to replace the front shock absorber, please contact your KAYO dealer. This requires relevant professional knowledge and skills.

### 21. Gasoline inspection

Before each ride, please check whether the gasoline pipeline is normal. If you find any shrinkage or rupture of the gasoline pipe, please replace the fuel pipe immediately to avoid leakage.

**DANGER:** Riding a motorcycle with a broken pipe may even cause a fire by starting the engine, so if you find a problem with the fuel pipe, do not start your motorcycle. When replacing the oil pipe, please use the matching equipment produced or authorized by KAYO original factory.

### 22. Fuel system inspection

Make sure oil tank, oil tank cap, switch etc. has no leakage before driving.

### 23. Steering column adjustment

Steering column should be adjusted frequently to keep the handlebar rotate freely.

Place the motorcycle on mounting bracket and make the front fork completely suspended. Turn the handlebars to the middle position, if the handlebars continue to move after letting go, the steering column is not tight. Hold the lower fork, gently push and pull the fork, if there is a free moving clearance, the column is not installed tightly.

steering column tightness adjustment:

- ◆ Fix bike and keep front fork suspended.
- ◆ Loosen upper plate retaining bolt;
- ◆ Rotate adjusting nut to right position;
- ◆ Tighten steering shaft nut;
- ◆ Recheck the steering, repeat above process if necessary;
- ◆ Recovery of handlebar.

### 24. routine lubrication

All bike parts need to be lubricated regularly. After cleaning the bike with low pressure water flow, the bike also needs to be lubricated. Use antioxidants to clean rusty parts and remove residual oil, grease and dirt from the surface before lubricated.


parts need to be lubricated:

- Rear brake pedal bearing
- Rear brake pedal
- Gear shift lever
- Chain

Spray with tubing for pressure lubrication. Lubricate the throttle cable with grease.

**note:** After driving on wet roads, even if the chain looks dry, it must be lubricated. Please use the recommended product for lubrication.

Directional column  
nut

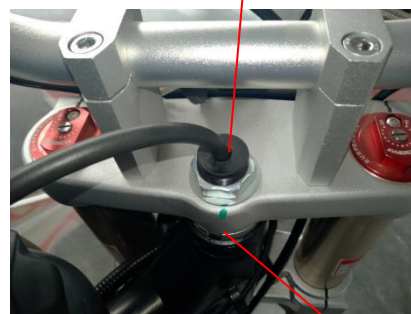

Adjusting nut



### 25.rear shock inspection

T4 model equipped with FASTACE double adjustable nitrogen air bag rear shock. The T2 model is equipped with non-adjustable nitrogen air bag rear shock. Both disassembly methods are the same. Check the rear shock, see the airbag condition and whether the spring is cracked. Replace the shock if necessary.

Please follow the following steps to disassemble the rear shock

- ◆ Lift bike to let it hang in the air;
- ◆ Remove seat;
- ◆ Remove guard fenders from left and right.
- ◆ Remove the muffler;
- ◆ Remove sub frame;
- ◆ Remove rear shock and frame mounting bolts.
- ◆ Loosen the connection bolt between U type and triangular swing arm (do not remove it).
- ◆ Remove connection bolt of rear shock and triangular swing arm.
- ◆ Make sure here is no interference, remove the rear shock .
- ◆ Installation: In reverse order of disassembly.



### 26.chain inspection

As a important bikes part, chain transfers engine output power to wheel. The chain needs inspection and maintain frequently to ensure its normal use.

Adjust chain tension:

- ◆ Let bike fixed and rear wheel hang in the air.
- ◆ Measure distance between fork rear and chain, normal range:30 ~ 36mm.
- ◆ Loosen rear shaft nut.
- ◆ Find out the max chain tension position.
- ◆ Adjust front and rear position of tensioner, make fork ends in line.
- ◆ Tight tensioner nut.
- ◆ Tight rear shaft nut.
- ◆ Check max tension point, adjust tension if necessary.。

When inspect chain tensioner, the chain guide rail and sprocket should be inspected. If the chain is overused or stretch excess 2%, replace it. If replace different specification chain, guide rail and sprocket should be replaced together. To keep performance, it's better to change whole transmission system when replace chain. Replace parts should be KAYO brand or KAYO recommend.

Chain need lubricated regularly.

**note :** wet-dry environment will shorten chain and parts related life, do




lubricating as request, choose right lubricant.

## **27.wheel inspection**

Two aspects:


thread: check the height, if shorter than min height, replace it.

Min thread height 3 mm.

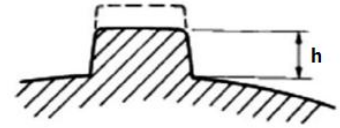

Tyre pressure: use barometer test tyre pressure.

Recommend tyre pressure: front 2.23bar; rear 2.77 bar.

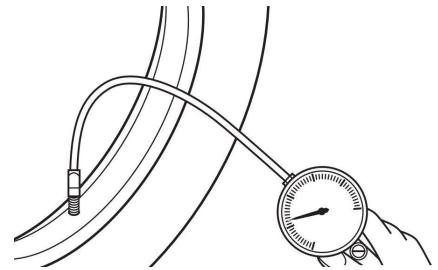

## **28.battery inspection**


Remove seat, use multimeter to test the positive and negative voltage and current output. If battery runs low, charge it. If battery damaged, replace it.

**note:** replace KAYO recommend brand.



## Vehicle settings

|                                    |    |
|------------------------------------|----|
| Specific settings and methods..... | 35 |
|------------------------------------|----|

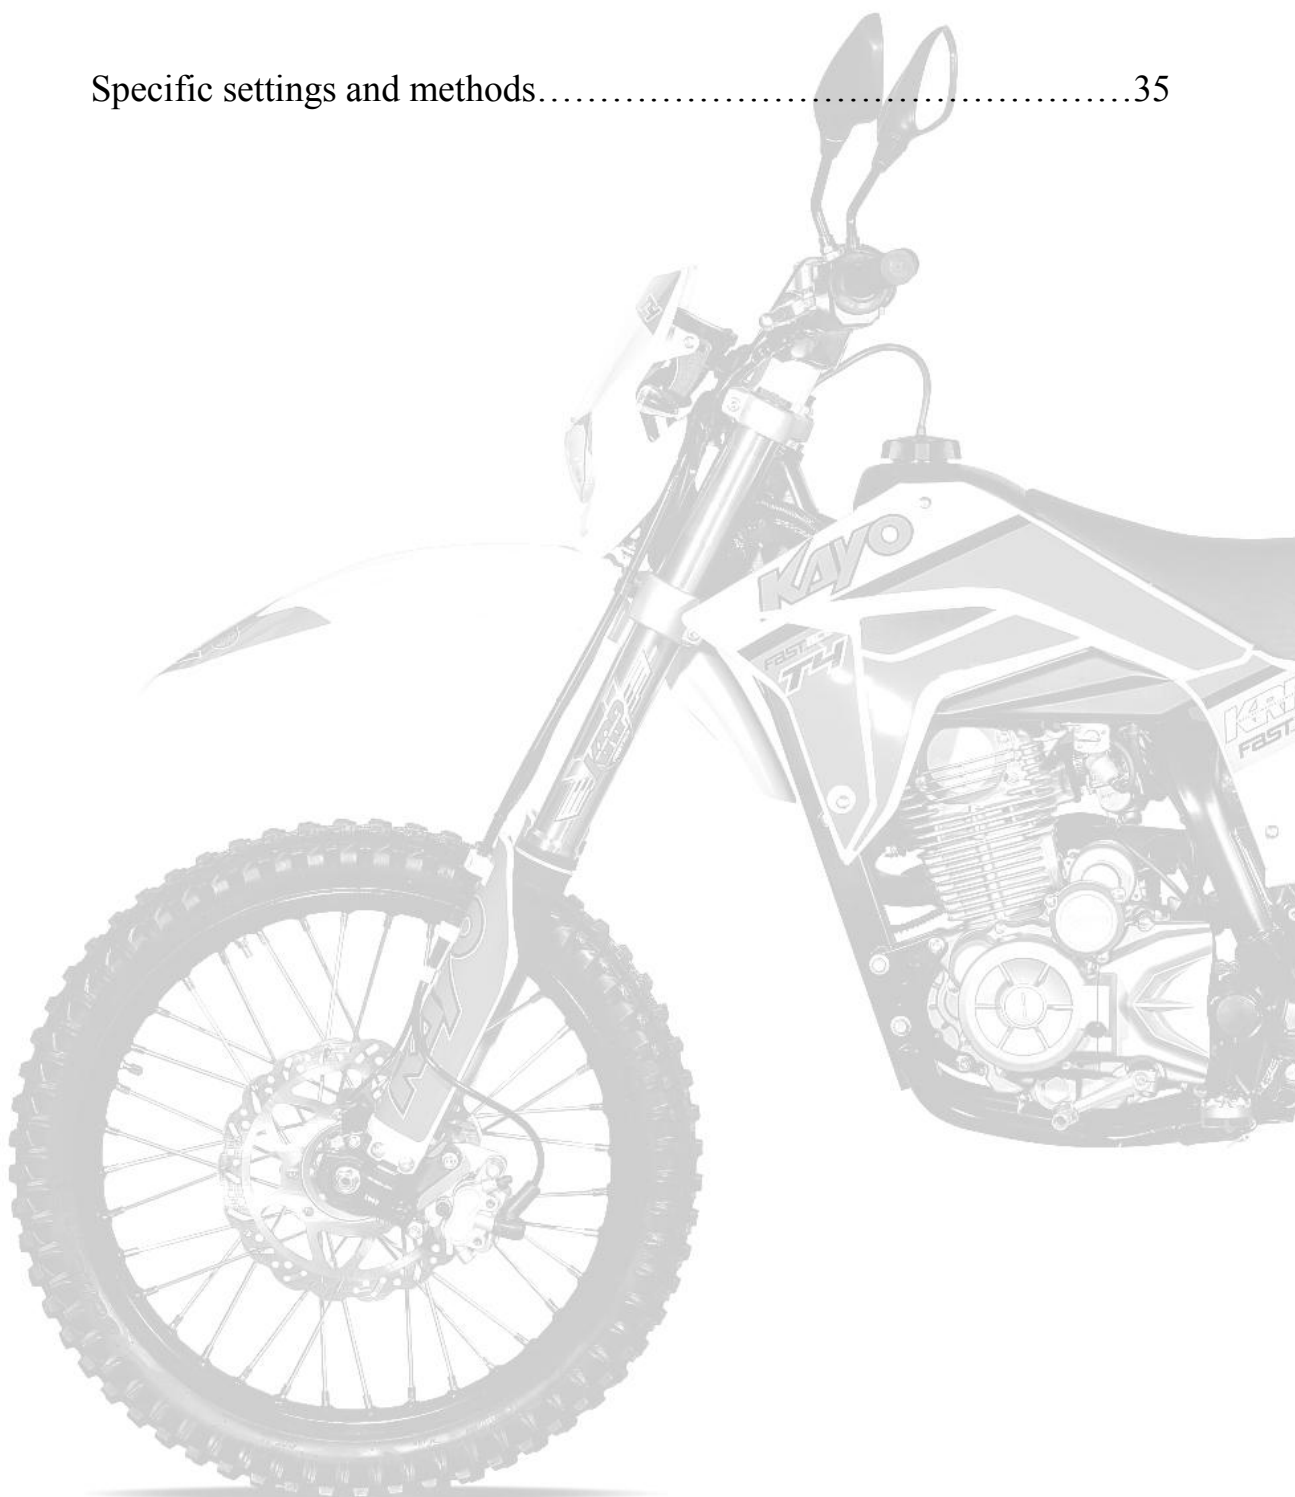

## Specific configuration and methods

### Carburetor

Carburetor is very important for bike performance, we use NIBBI PE28. change valve opening will affect gas mixture, then engine performance. You can update carburetor to make bikes more suitable.



### Two way transmission ratio setup

Two way transmission ratio can adjusted by changing sprocket teeth.

KAYO model T2&T4 rear and front sprocket teeth:

Rear sprocket: 45T

Front sprocket: 13T

**note:** Do consult dealer before replace sprocket.

**note :** adjust or replace chain based on actual condition. If choose unfit chain will worn out sprocket sooner, even cause accident.

If reduce transmission ratio, the max speed reduced too, but this better for acceleration. Low speed is easy to bike control and suitable in rough road.

If increase transmission ratio, the max speed increased too. high speed is not good for low speed bike control and acceleration.


## Front suspension

Frame, engine and suspensions are the most important parts for bikes. Frame and engine can't adjust, but suspension can adjust based on using. T4 equipped with FASTACE inverted double adjustable suspension. Stiffness and damping can be adjusted as below:

- Compression adjusting screw on the top.
- Exhaust screw on the top.
- Rebound adjusting screw on the bottom.

**note:** when adjust front fork, both sides adjusted together, or it may cause accident.

Exhaust screw

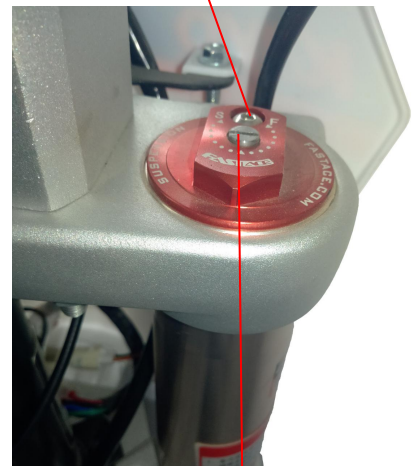

Compression adjusting screw



Rebound adjusting screw

Pressure adjusting screw

Spring preload adjustment



Rebound adjusting screw

## Rear suspension

T4 equipped with FASTACE double adjustable nitrogen balloon rear suspension, adjusted as bellow:

- Compression adjusting screw.
- Spring preload adjustment
- Rebound adjusting screw

## Electric parts inspection

|                                                |    |
|------------------------------------------------|----|
| Electric parts inspection and replacement..... | 38 |
|------------------------------------------------|----|



## Electric parts inspection and replacement

### Electric lock inspection and replacement

#### Disassembly

As bellow:

Remove headlight/ front panel

Dispatch connector between electric lock and main cable.

Take electric lock off.

#### Inspection

Check whether the terminals connectors can be conducted as the table shows:

|     | black | red   | Black/white | green |
|-----|-------|-------|-------------|-------|
| On  | ● — ● | ● — ● |             |       |
| Off |       |       | ● — ●       | ● — ● |

● — ● Conduction is normal

If doesn't connected, replace it.

#### Installation

In reverse order of disassembly.

### Meter inspection and replacement

#### Disassembly

As bellow:

Remove headlight/ front panel

Dispatch connector between electric lock and main cable.

Remove meter fixed screw

Remove meter

#### Inspection


Open electric lock

Check the meter data

If meter doesn't work, replace it.

#### Installation

In reverse order of disassembly.

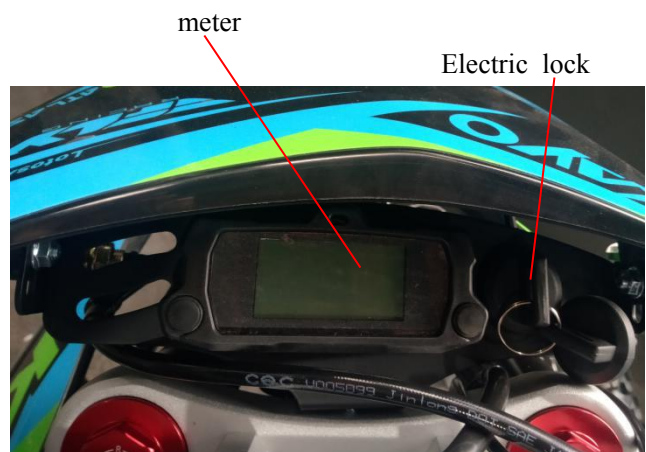

## Multi-function switch inspection and replacement

### Disassembly

Remove the switch mounting screw

Disconnect the connector between switch and main cable.

Remove switch

### Inspection

Check whether the terminals connectors can be conducted as the table shows:

● — ● Conduction is normal

#### ①headlight switch wiring table

|                | blue  | black | brown | white |
|----------------|-------|-------|-------|-------|
| Distance light | ● — ● | ● — ● | ● — ● |       |
| Lower beam     |       | ● — ● | ● — ● | ● — ● |
| OFF            |       |       |       |       |

#### ②stop switch wiring table

|      | Black/white | green |
|------|-------------|-------|
| stop | ● — ●       | ● — ● |
| On   |             |       |

#### ③electric switch wiring table

|          | yellow/red | green/white |
|----------|------------|-------------|
| electric | ● — ●      | ● — ●       |

#### ④turning lights switch wiring table

|   | orange | grey  | Light blue |
|---|--------|-------|------------|
| ← | ● — ●  | ● — ● |            |
| → |        | ● — ● | ● — ●      |


#### ⑤horn switch wiring table

|      | purple | yellow |
|------|--------|--------|
| horn | ● — ●  | ● — ●  |

If doesn't connected, replace switch.

### Installation

In reverse order of disassembly.

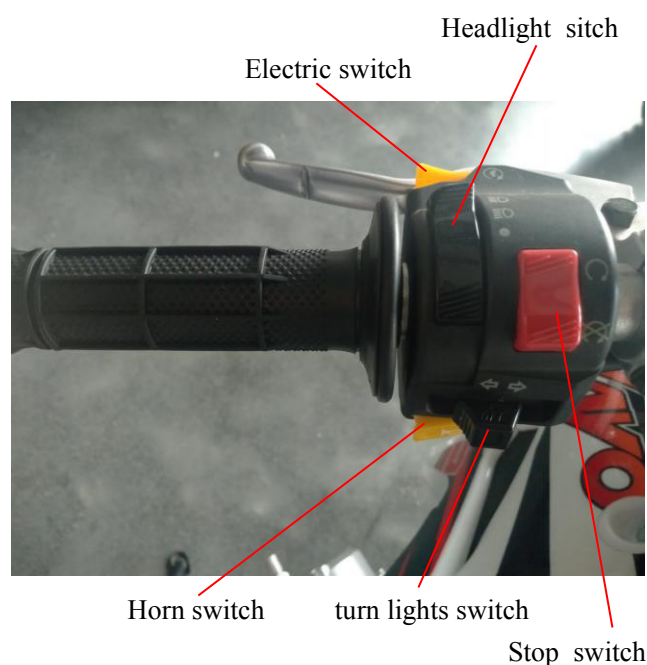

## Headlight inspection and replacement

### Disassembly

As follows:

Remove mounting bolt from the headlight bracket

Remove the mounting screw from the lower headlight bracket

Disconnect the connector between headlight and main cable connector.

Take off the headlight.

### Inspection

Check whether the terminals of the headlight connector can be conducted as the table shows:

|                | blue  | green | white | brown |
|----------------|-------|-------|-------|-------|
| distance light | ● — ● | ●     |       |       |
| Lower beam     |       | ● — ● | ●     |       |

● — ● Conduction is normal

If not replace bulb or whole headlight.

**note:** when working headlight bulb power is large and with high temperature, keep the bulb cooled before touching and operating.

### Installation

In reverse order of disassembly.




## Front turn light inspection and replacement

### Disassembly

As below:

#### Remove headlight

Disconnect the left and right turn lights from the main cable.

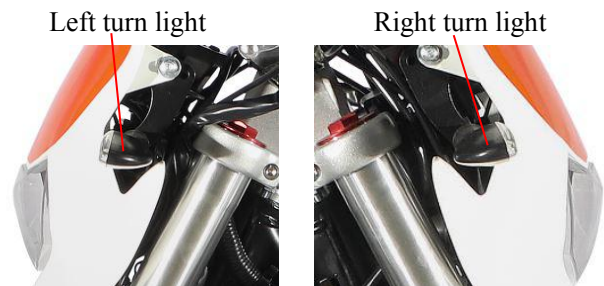

### Inspection

Check whether the terminals of the turn lights connector can be conducted as the table shows

|                  | orange | green | blue  |
|------------------|--------|-------|-------|
| Left turn light  | ● — ●  | ● — ● |       |
| Right turn light |        | ● — ● | ● — ● |

● — ● Conduction is normal

If not replace turn light

### Installation

In reverse order of disassembly.

## Inspection and replacement of horn

### Disassembly

Disassemble the horn as below:

Remove headlight/head panel

Disconnect the horn from the main cable

Remove horn mounting bolt

Remove electric horn



### Inspection

Connect the horn to the battery by wire

If the horn can make a continuous loud sound, the horn is normal. Otherwise, you need to replace the horn

### Installation

Installation in reverse order of disassembly

## Inspection and replacement of rear turn signal

### Disassembly

The steps for removing the rear left and right turn lights are as below:

Disconnect the left and right turn lights from the main cable

Remove the shelf

Remove left and right lights

Rear left turning light



Rear right turning light



### Inspection

Check whether the turn signal terminals are on

|                     | orange | green | blue  |
|---------------------|--------|-------|-------|
| Left turning light  | ● — ●  | ● — ● |       |
| Right turning light |        | ● — ● | ● — ● |

● — ● The conduction is normal

Replace the corresponding turn signal if it can not be switched on

### Installation

Installation in reverse order of disassembly

## Inspection and replacement of taillights

### Disassembly

The taillights are removed as below:

Disconnect the taillight from the main cable

Remove taillight mounting nut

Remove tail lights

### Inspection

|                | brown | green | yellow/green |
|----------------|-------|-------|--------------|
| stoplight      |       | ● — ● | ●            |
| anti-fog light | ● —   | ● —   |              |

Check whether the tail lights terminals are on

● — ● The conduction is normal

If the taillight is not on, replace the tail light

### Installation

Installation in reverse order of disassembly



## Inspection and replacement of licence lamps

### Disassembly

The license plate light is removed as below:

Disconnect the light from the main cable

Remove plate lamp fixing bolts

Remove licence lamp

### Inspection

Check whether the license plate light terminals are on


|                     | brown | green |
|---------------------|-------|-------|
| license plate light | ● —   | ● —   |

● — ● The conduction is normal

If the license plate light is not on, replace the license plate light

### Installation

Installation in reverse order of disassembly

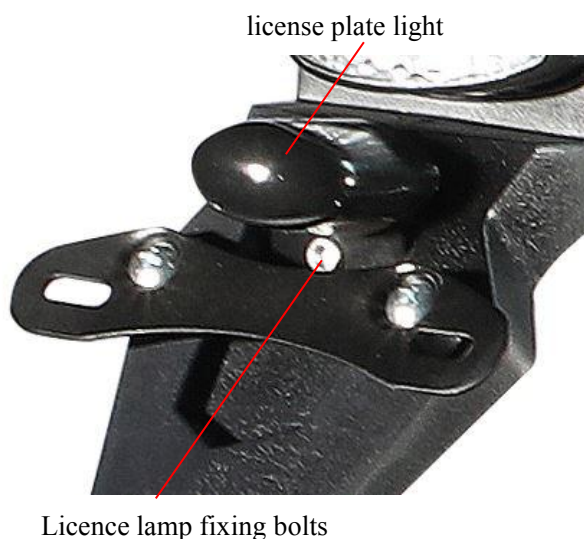

## Check and replace relays

### Disassembly

The relay is removed as below:

Remove

Removal of seat cushion

Removal of the rear right upper and lower panels

Disconnect relay from main cable

Remove relay

### Inspection

Start the car, if the car can be started normally, the relay is normal; conversely, if other parts are normal, the relay needs to be replaced.

### Installation

Installation in reverse order of disassembly



relay

## Inspection and replacement of steady

### voltage rectifier

#### Disassembly

The steady voltage rectifier is removed as below:

Remove seat cushion

Remove tank

Disconnect the voltage regulator from the main cable

Remove mounting bolts

Remove rectifier

#### Inspection

Start the vehicle, if can be started normally, the steady voltage rectifier is normal; conversely, if other parts are normal, the rectifier needs to be replaced.

#### Installation

Installation in reverse order of disassembly



steady voltage rectifier

## Inspection and replacement of igniter

### Disassembly

The igniter is removed as below:

Remove seat cushion

Remove air filter cover

Disconnect igniter from main cable

Remove igniter

### Inspection

Start the vehicle, if it can be started normally, the igniter is normal; conversely, if other parts are normal, the igniter needs to be replaced.

### Installation

Installation in reverse order of disassembly



igniter

## Inspection and replacement of ignition coil

### Disassembly

Remove seat cushion

Remove oil tank

Disconnect the ignition coil from the main cable

Remove the ignition coil mounting bolts

Take down the ignition coil

### Inspection

Start the vehicle, if it can be started normally, the ignition coil is normal; conversely, if other parts are normal, the ignition coil needs to be replaced.

### Installation

Installation in reverse order of disassembly



mounting bolts

ignition coil

## Speed sensor inspection and replacement

### Disassembly

The speed sensor is removed as below:

Remove the headlight

Disconnect sensor from main cable

Remove the fixing nut

Take out the sensor

### Inspection

Check whether the sensor is normal through the instrument, if the sensor is damaged, replace the sensor.

### Installation

Installation in reverse order of disassembly



Speed sensor

fixing nut

## Vehicle Troubleshooting

Possible failures and troubleshooting methods.....48



## Possible failures and troubleshooting methods

In the following, we will list the problems that arise during your use, find out the possible causes and give general solutions.

| Problem                                    | Reason                                                                   | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------------------------------|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine crank can not rotate            | Crank stuck                                                              | Contact KAYO Service Centre                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                                            | Cylinder, piston, connecting rod stuck                                   | Contact KAYO Service Centre                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|                                            | Gearbox stuck                                                            | Contact KAYO Service Centre                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Press the starter, the engine doesn't work | Starting relay fuse was burnt                                            | Remove seat cushion and check fuse, replace fuse if it was burnt.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|                                            | Insufficient battery power                                               | Remove the cushion and check the battery                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Engine can not be started                  | The motorcycle was parked for a long time and the fuel had deteriorated. | Drain old fuel and inject new fuel                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                                            | The spark plug is wet or dirt                                            | Clean or dry spark plugs and replace spark plugs if necessary                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|                                            | Engine was taken in water                                                | First, exhaust the oil in the crankcase and remove it. Clean it with a strong cleaning agent and remove the spark plug. Blow it dry with a fan (a machine that inflates the tire), then dry the air filter and remove the exhaust pipe. Blow dry with fan. When everything is done, the owner should add new oil to the engine before driving. Because the moisture in the crankcase is difficult to evaporate completely, the new oil will contain a little water. Therefore, after the engine was taken in the water and the vehicle runs 100 kilometers, the oil should be changed and changed again within 500 kilometers. After three times, the carburetor's moisture is almost gone.<br>If you want to test the carburetor for moisture, you can remove the oil from the crankcase, observe its color, if white, that means there is moisture. If the cylinder has water, in the case of flameout, step for a several times to start the rod. If you step it for a several times, the water in the cylinder will drain away from the exhaust pipe, and then blow the fan into the oil mouth for a few minutes.<br><b>Warning:</b> For the sake of safety, the spark plug should be wrapped with dry cloth to avoid spark jumping. |
|                                            | Incorrect mixing of air and fuel                                         | Clean the tank vent and adjust the air filter duct                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|                                            | Open the exhaust valve                                                   | Check exhaust valve and correct                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

|                                                     |                                                              |                                                                                                                                                                              |
|-----------------------------------------------------|--------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine can start, but it will stall immediately | Incorrect air supply                                         | Close the stop valve, clean the tank vent and adjust the air filter duct                                                                                                     |
|                                                     | Lack of fuel                                                 | supplementary fuel                                                                                                                                                           |
| Uneven engine operation                             | Dirt on spark plugs, damage or adjustment error              | Remove spark plug for cleaning, adjustment and replacement if necessary                                                                                                      |
|                                                     | Problem with spark plug                                      | Check the condition of the spark plug cap, check whether the contact between the spark plug cap and the cable itself is good, check the cable and replace the damaged parts. |
|                                                     | Ignition rotor damage                                        | Change the rotor                                                                                                                                                             |
|                                                     | The fuel was mixed with water                                | Empty the fuel and inject new fuel                                                                                                                                           |
| Inadequate engine power or poor acceleration        | Problems with fuel supply                                    | Clean fuel system and check                                                                                                                                                  |
|                                                     | Dirt in air filter                                           | Clean air filter, replace if necessary                                                                                                                                       |
|                                                     | Exhaust system damaged or leaking                            | Check the exhaust system for damage and replace relevant fittings if necessary                                                                                               |
|                                                     | Dirt in carburetor nozzle                                    | Remove the carburetor and clean the nozzle                                                                                                                                   |
|                                                     | Crankshaft bearings damaged or worn                          | Contact KAYO Service Centre                                                                                                                                                  |
| Engine sound abnormally                             | Ignition problem                                             | Contact KAYO Service Centre                                                                                                                                                  |
|                                                     | overheating                                                  | See the "engine overheating section"                                                                                                                                         |
| Tempering of exhaust pipe                           | Carbon deposits in the combustion chamber                    | Contact KAYO Service Centre                                                                                                                                                  |
|                                                     | Gasoline inferior                                            | Replacement of fuel                                                                                                                                                          |
|                                                     | The spark plug is in poor condition or in poor specification | Replace new spark plugs with correct specifications                                                                                                                          |
|                                                     | Exhaust gasket aging                                         | Check that the exhaust system is damaged, that the gasket is in good condition, and that if the gasket is aged, replace the gasket                                           |
| Smoke from exhaust pipe                             | Oil contains moisture                                        | Replace the fuel                                                                                                                                                             |
| Black smoke from exhaust pipe                       | Air filter blocked                                           | Remove and clean air filter                                                                                                                                                  |
|                                                     | Excessive concentration of combustible mixture               | Adjusting the valve                                                                                                                                                          |
| Gearbox gear don't mesh                             | Clutch anomaly                                               | Contact KAYO Service Centre                                                                                                                                                  |
|                                                     | To bend or jam a fork.                                       | Check and adjust the dial                                                                                                                                                    |
|                                                     | Gearbar damaged                                              | Replace the gearshift lever                                                                                                                                                  |
|                                                     | Shift drum damaged                                           | Replace the shift drum                                                                                                                                                       |
|                                                     | Ratchet unit damaged                                         | Replace the ratchet unit                                                                                                                                                     |
|                                                     | Stiter position spring loose or broken                       | Replace the stiter position spring                                                                                                                                           |
| Gear jump                                           | Fork worn                                                    | Replace the fork                                                                                                                                                             |
|                                                     | Tooth worn                                                   | Check gears and replace if necessary                                                                                                                                         |


|                                 |                                                           |                                                                                               |
|---------------------------------|-----------------------------------------------------------|-----------------------------------------------------------------------------------------------|
|                                 | Gear worn                                                 | Replace the gear                                                                              |
|                                 | Shift drum damaged                                        | Replace the shift drum                                                                        |
|                                 | Fork shaft worn                                           | Check the fork shaft and replace if necessary                                                 |
|                                 | Speed selector position spring damaged                    | Replace it                                                                                    |
| clutch slip                     | clutch disc worn                                          | Replace it                                                                                    |
|                                 | Too soft or damaged clutch disc spring                    | Replace it                                                                                    |
|                                 | The clutch is too small                                   | Adjust the free travel of clutch                                                              |
| Motorcycle hard to turn         | Cables make turning difficult                             | Moving cables to reduce interference                                                          |
|                                 | Steering shaft nut too tight                              | Adjust steering shaft nut                                                                     |
|                                 | steering bearings worn or damaged                         | Check steering bearings and replace if necessary                                              |
|                                 | Steering shaft bending                                    | Contact KAYO Service Centre                                                                   |
| Damping too hard                | The front fork level is too high                          | Lower forward fork level to appropriate position                                              |
|                                 | High viscosity of fork oil                                | Replace the front fork oil with suitable viscosity                                            |
|                                 | Front fork bent                                           | Contact KAYO Service Centre                                                                   |
|                                 | Too much tire pressure                                    | Check tire pressure and adjust to appropriate pressure                                        |
|                                 | Error in damping adjustment                               | Regulating shock absorption                                                                   |
| Damping too soft                | Insufficient front fork oil level                         | Add proper amount of prong oil<br><b>Warning:</b> Request for the same oil                    |
|                                 | The viscosity of the fork oil is too low                  | Replace with front fork oil with suitable viscosity                                           |
|                                 | Too low tire pressure                                     | Check if the tyre is leaking, and if the tyre is complete, pump up to the proper air pressure |
|                                 | Error in damping adjustment                               | Regulating shock absorption                                                                   |
| Motorcycles with abnormal noise | Improper chain adjustment                                 | Re-adjust chain tension                                                                       |
|                                 | Chain worn                                                | Replace the chain and front and rear sprocket                                                 |
|                                 | rear sprocket gear worn                                   | Replace the rear sprocket                                                                     |
|                                 | Insufficient lubrication of chain                         | Follow the manual to lubricate the chain                                                      |
|                                 | Rear wheel off center                                     | Check the spokes and adjust the center of the spokes tension if necessary                     |
|                                 | Front fork spring soft or broken                          | Replace the front fork spring                                                                 |
|                                 | Brake disc worn                                           | Check the brake disc and replace it if its thickness is less than the limit thickness         |
|                                 | Cylinder head damaged                                     | Contact KAYO Service Centre                                                                   |
|                                 | Poor fastening of supports, nuts and bolts                | Check and adjust the torque of the corresponding fasteners                                    |
|                                 | Wrong mounting of liner, abrasion or excessive smoothness | Re-adjust liner and replace if necessary                                                      |

## ZHEJIANG KAYO MOTOR CO., LTD.

|                                     |                                               |                                                                                         |
|-------------------------------------|-----------------------------------------------|-----------------------------------------------------------------------------------------|
| Motorcycle front wheel shimmy       | Tyre worn                                     | Replace the tyre                                                                        |
|                                     | Wheel offset                                  | Contact KAYO Service Centre                                                             |
|                                     | front wheel bearings worn                     | Check bearings and replace if necessary                                                 |
|                                     | Vehicle misalignment                          | Check spokes and adjust spokes tension if necessary                                     |
|                                     | Excessive steering shaft tolerance            | Check steering shaft pressure bearing clearance                                         |
|                                     | Steering shaft nut loose, handlebar not fixed | Check and re-fasten                                                                     |
| The motorcycle inclines to one side | Chassis bent                                  | Contact KAYO Service Centre                                                             |
|                                     | Improper steering adjustment                  | Check and readjust                                                                      |
|                                     | Steering shaft bent                           | Contact KAYO Service Centre                                                             |
|                                     | Problems with fork                            | Contact KAYO Service Centre                                                             |
|                                     | Vehicle not aligned                           | Re-adjusting spoke tension.<br>Contact KAYO Service Centre if necessary.                |
| Brake failure                       | Brake disc worn                               | Replace the brake discs                                                                 |
|                                     | Insufficient brake fluid                      | Replenish brake fluid                                                                   |
|                                     | Brake fluid deterioration                     | Replace the brake oil                                                                   |
|                                     | Piston damaged                                | Contact KAYO Service Centre                                                             |
|                                     | Brake pad worn                                | Check brake pad and replace it if its thickness is less than minimum friction thickness |

## Engine maintenance manual

|                                             |    |
|---------------------------------------------|----|
| Main performance parameters.....            | 53 |
| Structure.....                              | 53 |
| Engine Installation.....                    | 54 |
| Engine maintenance and adjustment.....      | 54 |
| Disassembly of the engine.....              | 57 |
| Torque gauge for engine bolts and nuts..... | 58 |
| Engine failures and troubleshooting.....    | 59 |

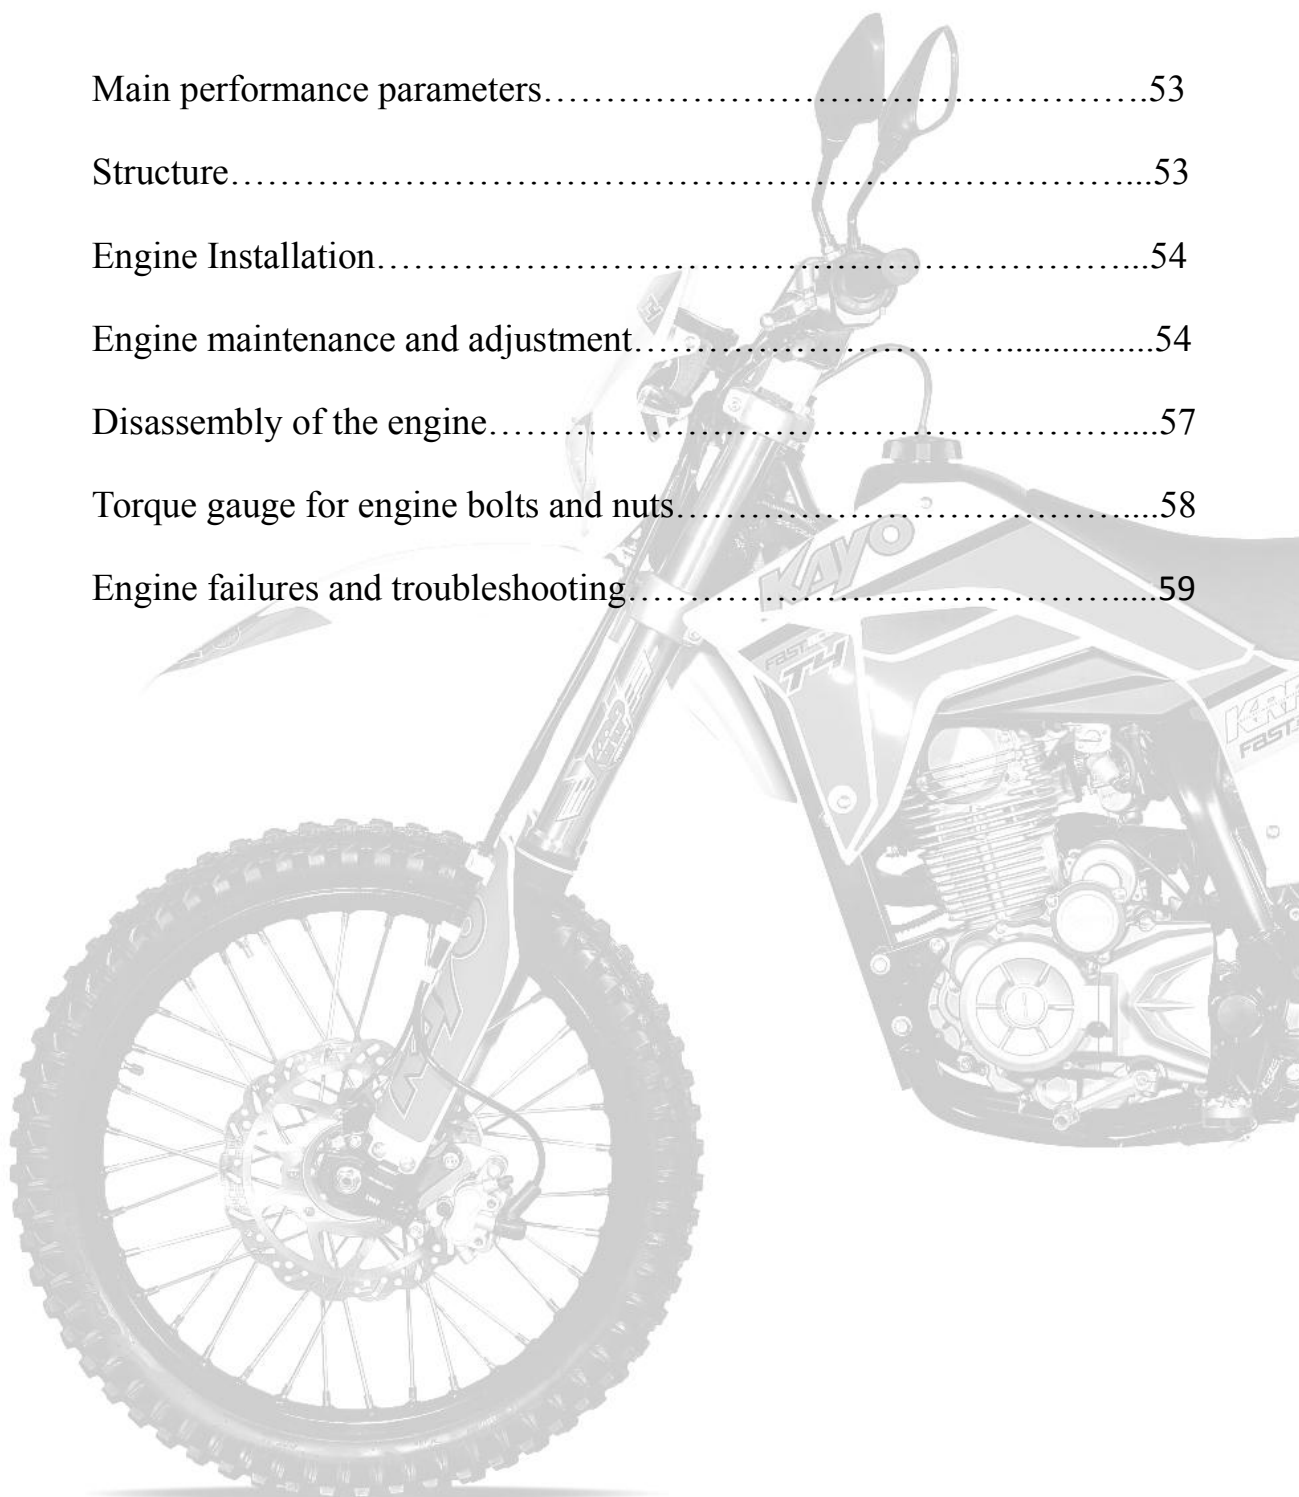

## **Main performance parameters**

Type: 1-cylinder, vertical, 4-stroke, Air cooling, Manual, overhead-cam

parameters:

a. max net power/speed: 12.0 (1±5%) kW /7500 (1±5%) rpm

b. max torque/speed: 17 (1±5%) N·m /6000 (1±5%) rpm

c. Idling speed: 1500 (1±10%) r/min

d. min fuel-consume ratio: 354 g / kw.h

Structure parameters:

a. Cylinder bore\*stroke: 66.5×66.2mm

b. Displacement: 223mL

c. Compression ratio: 9.2:1

d. Lubricating system: pressure lubrication, splash lubrication.

e. Valve clearance(cold): 0.03mm~0.05mm

f. Ignite type: CDI

Clutch type:

Manual Wet Multi-Plate

Gearshift method:

Constant mesh, two stage transmission , 6-speed Gearshift

Primary ratio: 3.333

Gear ratio:

1 gear: 3.083

2 gear: 2.063

3 gear: 1.450

4 gear: 1.130

5 gear: 0.957

6 gear: 0.815

Starting method:

Electric

Spark type: D8EA

Fuel and oil:

Gasoline brand: ≥RQ90

Lubrication brand: SJ 10W/40 four stroke gasoline engine oil

Lubrication volume: 1L

Dimension: 350×350×450mm

N.W.: 32kg

## **Structure**

## 1. Gas distribution mechanism

The timing driven sprocket on the crankshaft drives the timing driven sprocket on the camshaft to rotate the camshaft. The cam wheel drives the rocker arm with the rotation of the camshaft. The rocker arm overcomes the resistance of the valve spring and controls the valve opening.

## 2. Lubrication system

The engine lubrication system uses pressure and splash type compound lubrication. The oil is sucked into the oil pump from the tank through the oil filter. The pressure oil output from the oil pump is filtered by the fine filter on the right crankcase cover and then divided into three points to each lubrication point. All the way: enter the left and right crankcases to lubricate the main and countershaft bearings and main and countershaft assemblies. Second way: Enter the cylinder block, cylinder head, cylinder head cover, and lubricate the rocker arm, valve, valve spring, cam surface, etc. Three-way: from the right cover to the crank pin through the oil hole on the right end of the crank to lubricate the connecting rod big bearing and the surface of the crank pin.

## Engine installation

The engine installation steps are as follows:

- (1) The engine is suspended from the frame (take care to protect the appearance of the engine).
- (2) Install the carburetor on the intake pipe and tighten it with nut M6 (2 pieces).
- (3) Install the throttle cable and air filter, the interface should be sealed, and the clutch control cable should be installed.
- (4) Install the drive chain.
- (5) Attach the left rear cover, and fasten  $M6 \times 35$  (2 pieces). Pay attention to the output of the magneto motor and the display wiring harness.
- (6) Install an exhaust muffler. The M8 nut and the exhaust pipe sealing ring should be installed firmly with a tightening torque of 10 to 15N.m. During installation, ensure that the exhaust port is not leaking.

## Engine maintenance and adjustment

Inspection of cylinder head and cylinder block mounting bolts and nuts

Check at the first 1000km and every 5000km. When the engine is cold, use a torque wrench to tighten the bolts and nuts according to the specified torque.

|        |    |          |
|--------|----|----------|
| torque | M8 | 28~32N.m |
|        | M6 | 10~15N.m |

Inspection of valve clearance

Check at the first 1000km and every 5000km. Excessive valve clearance will cause valve noise. Too small valve clearance will cause engine power reduction and valve damage. Check the valve clearance according to the above mileage and adjust the valve clearance according to the following procedures:

- ◆ Remove the valve cover.
- ◆ Unscrew the magnetomotor plug and timing plug on the left front cover, and use a 14mm socket wrench to rotate the magnetomotor rotor so that the piston reaches the top dead center of the compression stroke

(turn the magnetomotor rotor until the engraved line on the rotor and the left front cover Until the timing holes are aligned).

- ◆ Insert a standard feeler gauge between the valve stem end and the adjusting screw on the rocker arm, and the inlet and exhaust valve clearance is 0.03 ~ 0.05mm.
- ◆ If the valve clearance is not within the above range, use a special tool to adjust it to the specified range.
- ◆ Reinstall the valve cover, magnet plug and timing screw.

Note: The valve clearance should be checked and adjusted when the engine is cold.

### Inspection of compression pressure

Check at the first 1000km and every 5000km. The inspection steps are as follows:

Allow the engine to idle and warm up.

Remove the spark plug.

Install the pressure gauge and connector into the spark plug installation hole, and ensure that the connection is secure.

Turn the throttle handle to the fully open position.

Start the engine several times with the starter motor, and read out the pressure gauge to show the maximum pressure value of the engine cylinder.

|                |             |
|----------------|-------------|
| standard value | 1200~1250Pa |
| Limit value    | 1100Pa      |


Low pressure indicates the following faults:

- ◆ Excessive wear on the cylinder wall.
- ◆ The piston or piston ring is worn.
- ◆ The piston ring snaps into the ring groove. The valve does not engage well with the valve seat.
- ◆ Cylinder head gasket is damaged. When the engine compression pressure is lower than the above-mentioned limit value, the engine should be reinstalled, inspected, and repaired according to the specific conditions.

**Note: Before testing the engine compression pressure, make sure that the cylinder head nuts and bolts are tightened according to the specified torque and the valve clearance is adjusted correctly.**

### Inspection of spark plug

The inspection is performed at the first 1000km and every 5000km, and it needs to be replaced every 10,000km. Use a wire or a needle to remove carbon deposits from the spark plug, adjust the spark plug gap to 0.6 to 0.7 mm, and measure with a feeler gauge. When removing carbon deposits, pay attention to the appearance of the spark plug and the color of the carbides.

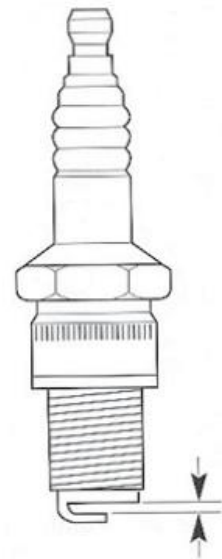

### Inspection of engine oil

Replace every 500km and every 1000km during the running-in period. The oil should be changed in the following order when the engine is hot.

- ◆ The parking rack supports the motorcycle, warm up the engine for (5 ~ 10) minutes, and stop waiting for (5 ~ 10) minutes.
- ◆ Unscrew the oil filter cover, remove the oil filter and spring, unscrew the oil dipstick, release the oil, and clean and dry the oil filter and spring at the same time. When cleaning the oil filter, remove any debris and check whether the filter is damaged.
- ◆ Install the oil filter and spring, tighten the oil drain plug, and add new oil from the filler port. The refueling volume is 1000ml. 10W / 40 oil with SF or SJ grades classified by API.
- ◆ Start the engine and let it run at idle speed for 3-5 minutes.


Turn off the engine, wait for about 3 minutes, check the oil height through the oil dipstick, and check the oil level of the motorcycle horizontally and vertically. If the oil level is on the middle line of the oil dipstick.

### Adjustment of the clutch operating system

In order to ensure the correct use of the clutch and the ease of operation, the user should make sure that the clutch is in the engaged state under normal conditions and must not be in the semi-clutch state when adjusting.

### Carburetor inspection and engine idle speed adjustment

Inspections were performed at the first 1000km and 5000km. Start the engine and adjust the throttle stop screw to make the engine speed between 1400 and 1600r / min.

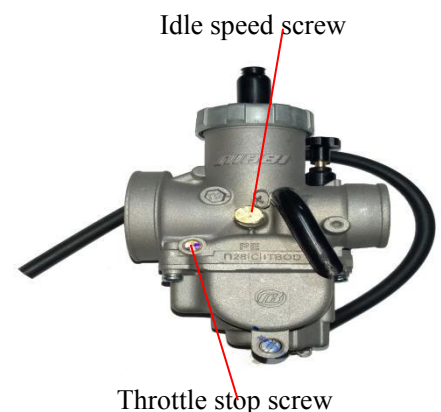

### Run-in of the engine

It is necessary for the new car to run in all moving parts before the engine runs at full load. The future performance and reliability of the engine depend on strict and careful running in and maintenance during the initial period of use. When starting and running during the running-in period, the engine speed is not allowed too high, don't start too fast, accelerate, to prevent the power unit from bearing impact load and affect the running-in quality. Generally after starting the engine, start at low speed and fully warm up. Drive at low speed for 1-2 km before turning to normal driving. The general running-in rules are as follows:

- ◆ The first 800km: below 3000r / min;
- ◆ 800 ~ 1600km: below 4000r / min;
- ◆ Above 1600km: below 7500r / min.

After traveling 1600km, you can drive with full throttle, but under no circumstances should the engine speed exceed 8500r / min.

During the running-in period, the throttle opening should be changed frequently, and the engine should not be allowed to run at the same speed for a long time.

## Disassembly of the engine

Disassembly and assembly of cylinder head, cylinder head and camshaft

- ◆ Remove carburetor, intake pipe and muffler
- ◆ Unscrew the bolt on the left side of the cylinder head, and remove the left side cylinder head cover and the left side cylinder head seal. Remove the starter motor.
- ◆ Remove the tensioner from the cylinder block.
- ◆ Unscrew the timing driven sprocket bolt, and remove the camshaft after removing the timing driven sprocket.
- ◆ Remove the cylinder head nut, the bolt connecting the cylinder head and the case, the bolt on the cylinder head cover, and remove the cylinder head cover and cylinder head.
- ◆ Remove the cylinder head (with valve, valve spring, washer, spring seat).

Assembly should be performed in the reverse order of disassembly.

**Note: When assembling the cylinder head cover, the joint surface must be glued.**

Disassembly and assembly of cylinder block and piston

- ◆ Remove the cylinder head seal, positioning pin and chain guide plate.
- ◆ Remove the cylinder block.
- ◆ Remove the piston pin retaining ring, piston pin, and piston (with piston ring).

Assembly should be performed in the reverse order of disassembly, and the piston ring end gap should be separated by 120 degrees and staggered.

Disassemble the left front cover

- ◆ remove the shift treadle
- ◆ remove electric start double gear shaft, double gear washer and double gear.
- ◆ remove the left front cover and box body connection bolts, remove the left front cover (with magnetic motor stator and trigger part).
- ◆ remove the left front cover paper pad, positioning pin, bridge teeth, bridge tooth shaft and gasket.
- ◆ remove the magneto fastening bolt, remove the magneto rotor (with the overrun clutch part) with special tools.
- ◆ remove the starting disc teeth.
- ◆ remove the timing chain baffle and timing chain.
- ◆ remove the gear display screws and gear display.

Assembly shall be in the opposite order of disassembly.

Disassembly and assembly of the right crankcase cover

- ◆ remove the clutch cable.
- ◆ remove the starting arm.
- ◆ remove the right crankshaft box cover and the box body connection bolt, remove the right crankshaft box cover, paper pad, positioning pin.
- ◆ remove the nut (left-handed), disc washer on the crankshaft.
- ◆ remove the clutch push rod, bearing.
- ◆ remove clutch lock nut (left-handed), butterfly washer.
- ◆ remove the center sleeve, spline washer, clutch cover and active teeth.
- ◆ remove shift arm, stop board and five star dial board.

Assembly shall be in the opposite order of disassembly.

Disassembly and assembly of the box body.

- ◆ remove the box body connecting bolts and remove the right crankshaft box body.
- ◆ remove the crank connecting rod parts, crankshaft adjustment gasket and balance shaft parts from crankcase.
- ◆ remove the fork shaft, fork, variable speed drum and main and secondary shaft sleeve.

Assembly shall be in the opposite order of disassembly.

### Torque gauge for engine bolts and nuts

| No. | Applicable parts           | Torque value |
|-----|----------------------------|--------------|
| 1   | Cylinder head nut M8       | 28-32N.m     |
| 2   | Cylinder head bolts M6     | 10-15N.m     |
| 3   | Timing sprocket bolts M6   | 10-15N.m     |
| 4   | Clutch fastening nut       | 40-50N.m     |
| 5   | Magnetic motor rotor bolts | 65-71N.m     |
| 6   | Valve bonnet               | 12-18N.m     |
| 7   | Box bolts                  | 10-15N.m     |

## Engine failures and troubleshooting

For the engine to function properly, it must under the following four conditions:

- 1、 Good fuel: There is a certain proportion of combustible mixture in the cylinder.
- 2、 Good spark: The spark plug can emit strong spark at the specified time.
- 3、 Full compression: enough compression pressure in the cylinder.
- 4、 Timing of distribution: correct valve opening time.

If the engine failures, we can focus on the above four aspects, check and analyze the causes of the failure, and eliminate it.

| Failure performance                       | Inspection methods                               | Inspection result                         | Possible causes                                               |
|-------------------------------------------|--------------------------------------------------|-------------------------------------------|---------------------------------------------------------------|
| Engine can not start or start difficultly | Check if the fuel has flowed into the carburetor | Fuel didn't flow into the carburetor      | No fuel in the tank                                           |
|                                           |                                                  |                                           | Blocking from fuel tank to carburetor tubing                  |
|                                           |                                                  | Fuel flowed into the carburetor           | Float assembly stuck in carburetor                            |
|                                           |                                                  |                                           | Stuck in upper vent of the fuel tank cap                      |
|                                           | Remove the spark plug and test spark             | The spark is weak or completely sparkless | Spark plug failure                                            |
|                                           |                                                  |                                           | Spark plug is not clean                                       |
|                                           |                                                  |                                           | Electrical ignition malfunction                               |
|                                           |                                                  |                                           | Magnetor failure                                              |
|                                           |                                                  | Spark is good                             | Bad wiring or broken                                          |
|                                           |                                                  |                                           | High voltage cable broken or short circuit                    |
|                                           |                                                  |                                           | Break or short circuit of ignition coil                       |
|                                           |                                                  |                                           | Ignition switch failure                                       |
|                                           | Test cylinder pressure                           | Pressure is too low                       | The starting mechanism slips and the engine can not be turned |
|                                           |                                                  | Pressure is normal                        | Valve clearance is too small                                  |
|                                           |                                                  |                                           | Valve opening block                                           |
|                                           |                                                  |                                           | Cylinder or piston ring worn                                  |
|                                           |                                                  |                                           | Cylinder head gasket broken                                   |
|                                           |                                                  |                                           | Improper valve timing                                         |
|                                           | Start the engine again                           | The engine ignited but can't start        | The choke is opened too big                                   |
|                                           |                                                  |                                           | Improper adjustment of carburetor fine-tuning screw           |
|                                           |                                                  | Engine not ignition                       | Air leakage in intake pipe                                    |
|                                           | Remove spark plug                                |                                           | wrong ignition                                                |
|                                           |                                                  | Spark plug is damp                        | High oil level of carburetor                                  |
|                                           |                                                  |                                           | The carburetor choke is shut too tightly                      |
|                                           |                                                  | Spark plug is dry                         | The throttle is opened too big                                |
| Engine                                    | Check timing and                                 | incorrect                                 | Improper adjustment of valve clearance or poor                |

|                                                |                                                                                 |                                                     |                                                              |
|------------------------------------------------|---------------------------------------------------------------------------------|-----------------------------------------------------|--------------------------------------------------------------|
| performance is poor at low speed or idle speed | valve clearance                                                                 |                                                     | quality of rocker adjusting screw                            |
|                                                |                                                                                 | correct                                             | Improper adjustment of timing                                |
|                                                | Check the adjustment of the screw on the plunger of the carburetor              | incorrect                                           | improper adjustment                                          |
|                                                |                                                                                 | correct                                             | /                                                            |
|                                                | Check if the grease trap is leaking                                             | air leak                                            | Carburetor seal ring deterioration                           |
|                                                |                                                                                 | air tight                                           | Carburetor loosening                                         |
|                                                | Remove spark plug and make spark test                                           | A faint spark or spark break                        | grease sealer damaged                                        |
|                                                |                                                                                 |                                                     | Spark plug failure or carbon deposit                         |
|                                                |                                                                                 |                                                     | Electrical igniter failure                                   |
|                                                |                                                                                 |                                                     | Magnetor failure                                             |
| Engine performance is poor at high speed       | Check ignition timing and valve clearance                                       | incorrect                                           | Spark plug cap failure                                       |
|                                                |                                                                                 |                                                     | Power supply circuit failure                                 |
|                                                |                                                                                 |                                                     | Ignition controller failure                                  |
|                                                | Disassemble the fuel tubing of the carburetor to check if the tubing is blocked | Valve clearance and ignition timing are all correct | Improper adjustment of valve clearance                       |
|                                                |                                                                                 |                                                     | Magnetor failure                                             |
|                                                |                                                                                 |                                                     | /                                                            |
|                                                | Check if filters and carburetor nozzles are blocked                             | Insufficient fuel flow                              | Fuel in tank is running out                                  |
|                                                |                                                                                 | Adequate flow of fuel pipes                         | Fuel pipe blockage                                           |
|                                                | Check timing of distribution                                                    | The air hole of tank cap blocked                    |                                                              |
|                                                |                                                                                 |                                                     |                                                              |
|                                                | Check valve spring pressure                                                     | blocked                                             | Block in measuring hole of chemical oil                      |
|                                                |                                                                                 | Not blocked                                         | Float blocked                                                |
|                                                | Check if there is abnormal noise for valve                                      | incorrect                                           | Filter blocked                                               |
|                                                |                                                                                 | correct                                             | Adjust timing of air distribution                            |
| abnormal noise of engine                       | Check if there is abnormal noise in the cylinder                                | Not enough pressure                                 | /                                                            |
|                                                |                                                                                 |                                                     | Valve spring worn or broken                                  |
|                                                | Check if there is abnormal noise in the timing chain                            | The valve has a noise                               | Too much valve clearance                                     |
|                                                |                                                                                 |                                                     | Valve worn                                                   |
|                                                |                                                                                 |                                                     | Piston and cylinder block worn                               |
|                                                | Check if there is abnormal noise in the timing chain                            | Cylinder has a noise                                | Small end holes in piston pins and links are worn            |
|                                                |                                                                                 |                                                     | Crank pin and connecting rod head worn                       |
|                                                |                                                                                 |                                                     | Camshaft worn                                                |
|                                                |                                                                                 |                                                     | Timing driven sprocket worn                                  |
|                                                | Check if there is abnormal noise in the timing chain                            | there is abnormal noise in the timing chain         | The chain is stretched                                       |
|                                                |                                                                                 |                                                     | Timing chain automatic tensioner failure or guide wheel worn |

## ZHEJIANG KAYO MOTOR CO., LTD.

---

|  |                                                                 |                                               |                                                      |
|--|-----------------------------------------------------------------|-----------------------------------------------|------------------------------------------------------|
|  | Check if there is abnormal noise from the main and driven gears | The main and driven gears have abnormal noise | The accuracy of gear machining is not enough         |
|  |                                                                 |                                               | Gear teeth are worn                                  |
|  |                                                                 |                                               | Small or large fit gap between main and driven gears |